

Swisscom (Schweiz) AG
Contact Center
CH-3050 Bern

www.swisscom.ch

10035341_07/2012_2G

Swisscom TV bedienen
Utiliser Swisscom TV
Utilizzare Swisscom TV
Using Swisscom TV



swisscom

Inhaltsverzeichnis

Wie starte ich Swisscom TV?	4	Comment démarrer Swisscom TV?	14
Fernsehen	5	Regarder la télévision	15
Funktionen und Einstellungen	6	Fonctions et paramètres	16
Wie bewege ich mich im Menü?	6	Comment naviguer dans le menu?	16
Aufnehmen und Abspielen (TV plus)	8	Enregistrer et visionner (TV plus)	18
Weitere Funktionen von Swisscom TV	10	Autres fonctions de Swisscom TV	20
Bildschirmeinstellungen	12	Paramètres d'écran	22
Kundencenter	13	Espace Clients	23

Table des matières

Indice

Come avviare Swisscom TV?	24	How to start Swisscom TV?	34
Guardare la televisione	25	Watching TV	35
Funzioni e impostazioni	26	Functions and settings	36
Come navigare nel menu?	26	How to navigate the menu?	36
Registrazione e riproduzione (TV plus)	28	Recording and viewing (TV plus)	38
Ulteriori funzioni di Swisscom TV	30	Other Swisscom TV functions	40
Impostazioni dello schermo	32	Screen settings	42
Area clienti	33	Customer Center	43


Table of contents

How to start Swisscom TV?

Switching Swisscom TV on

TV-Box remote control


- 1 Push the **POWER** button.
(The **Standby** display is lit in white.)

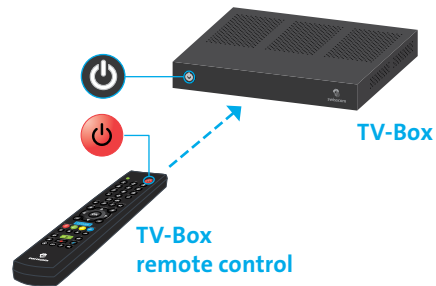

TV remote control

- 2 Switch the TV on.
- 3 If no image appears:
select an HDMI or AV channel.

Most TV remote controls have **one** of the following buttons allowing you to do so:

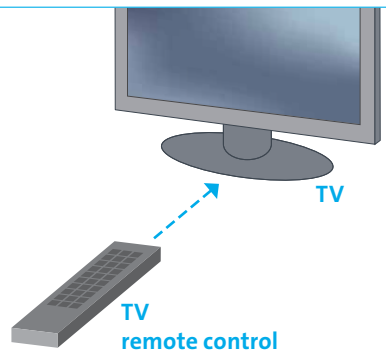

«What is the HDMI/AV channel?

You can connect several devices and cables (e.g. cable TV) to your TV set (at the back). You should next select the image of which device or channel you want to display on your TV screen.
Tip: The HDMI/AV channel corresponds to the port at the back of your TV set where you insert the HDMI (or SCART) cable.»



«Which remote control to use?

When you are watching Swisscom TV, you need the TV remote control to switch the TV on and select the right channel to watch Swisscom TV.»

Watching TV

Finding and selecting programs

Switching between channels

- > **+ - PROGRAMME** buttons:
switch between channels

Switching within the picture in picture function (preview screen)

- > **▲▼ up/down** buttons:
the next channel is displayed in the preview screen
- > **OK** button:
Change the channel
- > **◀▶ left/right** buttons:
Preview of upcoming programs
- > **OK** button:
Display further program information



With the **TV-GUIDE** TV-Guide (electronic program guide)

- > Push the **TV-GUIDE** **TV-GUIDE** button
- > **▲▼ up/down** button:
Navigate through the channels
- > **◀▶ left/right** buttons:
Navigate through time
- > **OK** button:
Go to current channel or record the upcoming program

 


In the bottom part of the screen you can see the name, start time and a short description of the selected program.

Note: Push the **i INFO** button to display the info page. To quit this info page and go back to the TV-Guide, push the **◀ BACK** button.

Functions and settings

m MENU button:
Here you can find **all functions of Swisscom TV.**

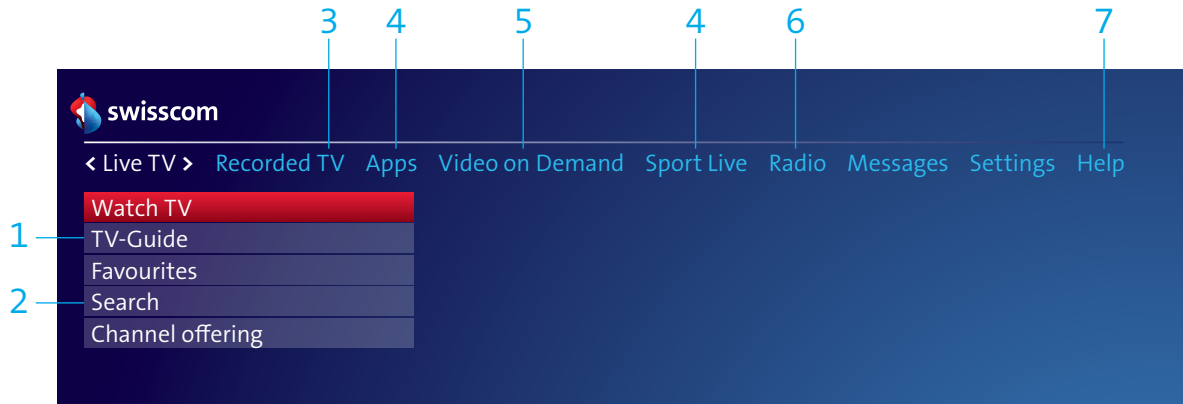


You can select the **functions** (1–7) directly. To do so, use the buttons on the right side.

How to navigate in the menu?

- 8 ◀▶ **left/right** buttons:
navigate the menu (left/right)
the selected menu is displayed in brackets < >
- 9 ▲▼ **Up/down** buttons:
Navigate the menu (up/down)
the selected sub-menu is marked in red
- 10 **OK** button:
Select/confirm the highlighted field
- 11 ◀◀ **BACK** button:
Go back to previous step/menu point
- 12 ◀◀ **EXIT TO TV** button:
Quit the menu and go back to the last viewed channel



«Are you holding the right remote control?»

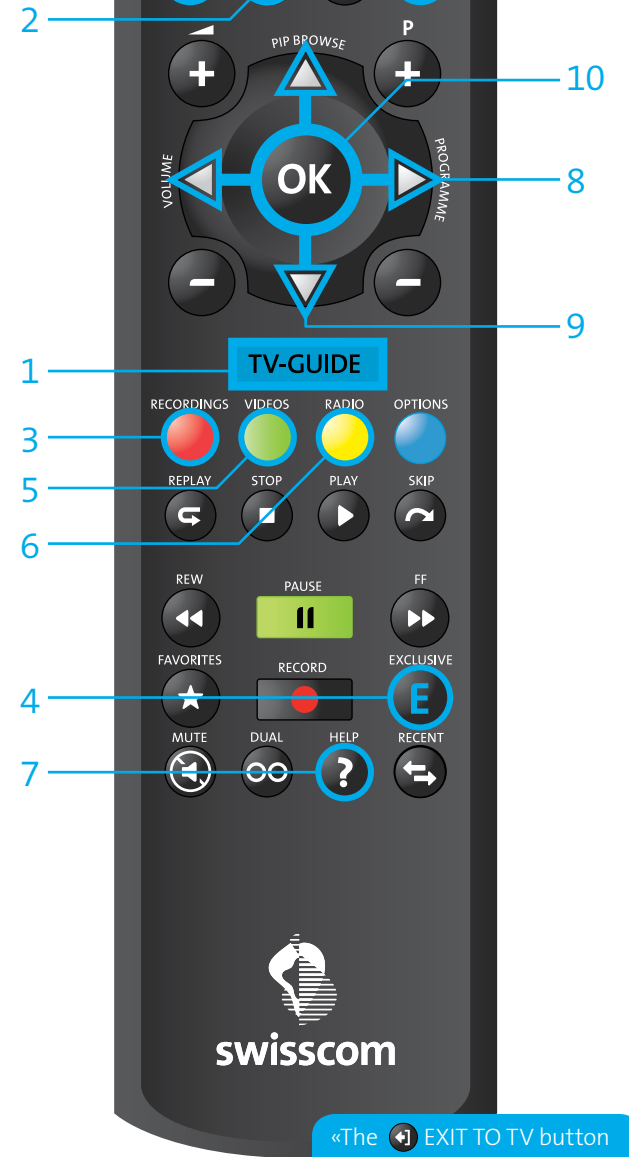

«The **EXIT TO TV** button allows you to quit the menu and to go back to the TV channel/radio station.»



Current program

When you are watching TV, the program you are currently watching is temporarily recorded. This allows you to pause the program and/or go back whenever you want. Nevertheless, the temporary recording only works **as long as you keep watching the same channel**. As soon as you change channels, the previous temporary recording is deleted and the program you are currently watching is temporarily recorded.

«Live Pause» (Temporary program recording)

- > **PAUSE** button:
Pause current program
- > **PAUSE** button:
Continue current program

 
Going backwards and forward

- > **REW/FF** buttons:
quickly going backwards and forward within a temporarily recorded program
- > **REPLAY** button:
going back 7 seconds
- > **SKIP** button:
go 30 seconds further

Recording

- > **RECORD** button:
Record current program

Note: The recording stops automatically when the current program has ended.

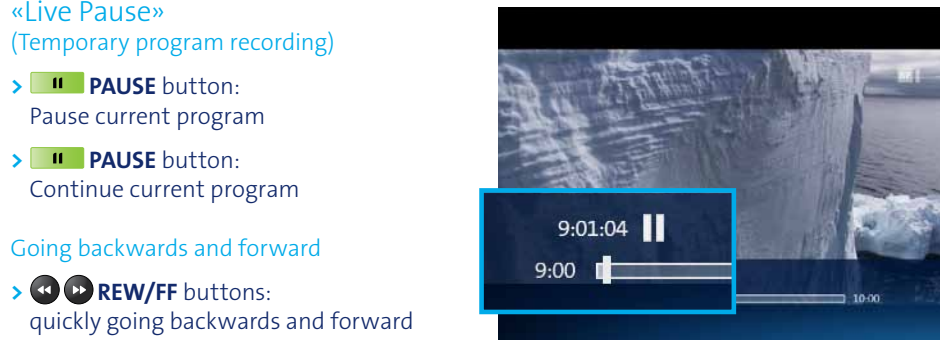

Warning: As soon as you change channels, the temporary recording is deleted.



A message indicating that the program is being recorded is displayed on the upper side of the screen.

Programs from the TV-Guide

Recording a single program

- > Push the **TV-GUIDE** **TV-GUIDE** button
- > **up/down** button:
Navigate through the channels
- > **left/right** buttons:
Navigate through time
- > **RECORD** button:
the selected program will be recorded



The **red line** indicates the currently selected program. The **red dot** marks the programs that will be recorded.

Series recording

You can also record the series of a program. This means that **all future episodes of this series will be recorded**.

- > Push the **RECORD** button twice



Three **overlapping red dots** mark the serial recordings.

Delete a programmed recording

Select the program and push the **RECORD** button until the red dot disappears.

Watching recorded programs

- > Push the **RECORDING** button
- > **up/down** buttons:
Select recording + **OK**
- > **Play** + **OK**



Note: You can choose if a recording should be automatically deleted, if the storage space on your TV-Box becomes too small:

- > **RECORDING** > «Select a recording» + **OK** > **Keep until** + **OK** > «Keep until» > Disk space needed + **OK** > I erase recording+ **OK**

Other Swisscom TV functions

Searching for a program or a video

- SEARCH** Searching by title, actor or channel
- ◀▶△▽+ **OK** Enter one letter after the other

Renting movies

- VIDEO** Video on Demand
- ◀▶△▽+ **OK** Navigate by using the arrow buttons.
- Click on a category listed on the left then select a movie.
- Click **Rent**. You can also **Save** the videos.
- Rented and saved (bookmarked) movies can be found under **My Videos** on the left.
- You can watch rented videos as many times as you want during the rental period.

Starting the Swisscom TV Apps

- EXCLUSIVE** Swisscom TV Apps
- ◀▶ Select App
- OK** Start App
- With the Swisscom TV Apps you can watch **gratis** the weather forecasts, read the latest news and watch your photos on a big screen. You can also get recommendations for movies and sports programs. **Ausserdem können Sie Börsendaten abrufen, Musik von Ihrem PC hören und sich mit diversen Spielen amüsieren.**



Additional functions

- OPTIONS** Additional functions in TV-mode, in TV-Guide mode and in the search function

 
Listening to the radio

- RADIO** Radio menu
- △▽ > **OK** Select the radio station
- If you have connected your stereo or your Home Cinema system to your TV-Box, you can turn off the TV set and still listen to the radio.
- Warning:** If you have «DSL start» to access the Internet, you can only listen to Internet radio if you open an Internet session on your computer.

Screen settings


Change screen language

- > Push the **m MENU** button
- Select <Settings>
- Select **General** + **OK**
- Select **On-screen language** + **OK**
- > **▲▼ up/down** buttons:
select the language + **OK**
- Confirm with **Save** + **OK**

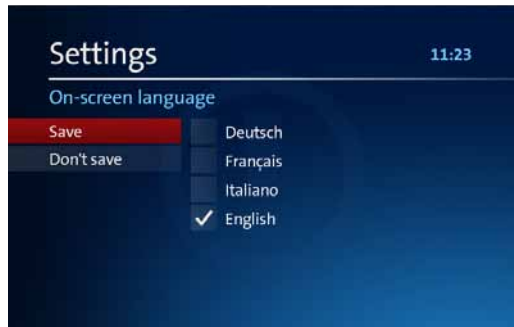

Change screen format

- > Push the **m MENU** button
- Select <Settings>
- Select **General** + **OK**
- Select **Screen aspect ratio** + **OK**
- > **▲▼ with up/down** buttons:
select aspect ratio & resolution + **OK**
- Confirm with **Save** + **OK**

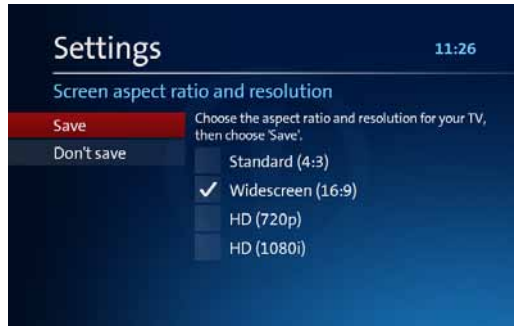

Note: if you select «HD 720p» or «HD 1080i» a test screen will appear first: Confirm with **OK**.

Make sure that you have set the TV-Box image in a way that is perfectly adapted to your TV set (please refer to your TV set manual). Your TV set must be set on the same screen settings as the TV-Box.

Optimising the image quality: video instructions

Here you need the TV or the projector remote control. Get familiar with the TV or projector remote control. Where do you set the luminosity, the contrast, the colour saturation... (usually in «menu» or «settings»)?

- > Push **? HELP** button
Select video «Picture settings» + **OK**
- > **⏸ PAUSE** button:
the video is now paused
- > **▶ PLAY** button:
continue video

 


Customer center

Setting your Swisscom TV parameters comfortably on your computer:


Defining the settings in the Customer Center

- Channel settings** Show and hide TV channels, change channel sequence
- Additional channels** Order in «change Swisscom TV»
- Settings** Cost limit, Parental control PIN, Purchase PIN

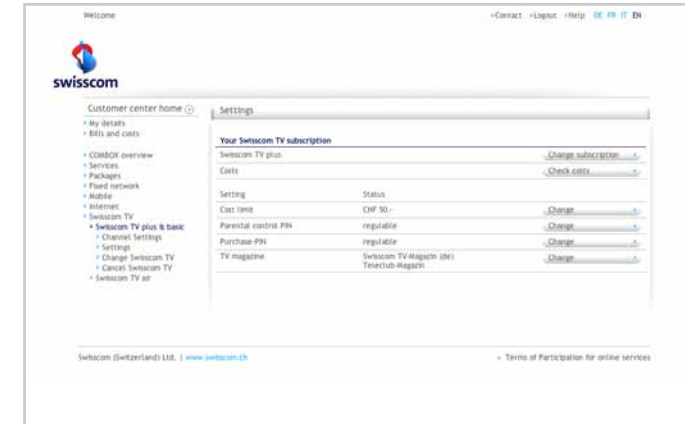

To access the Customer Center

 - 1 Enter **www.swisscom.com/login** in your Internet browser
- 2 Enter your Swisscom credentials (username/password).

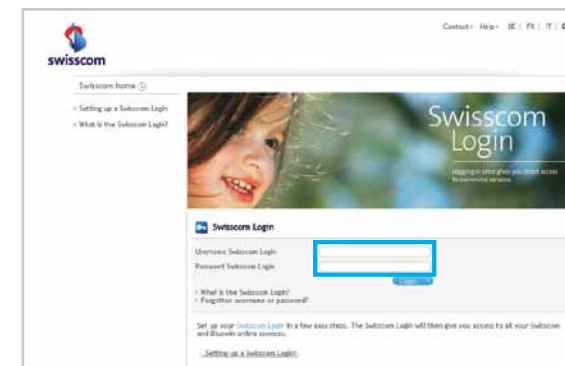

- 3 On the left side, click on **Swisscom TV**.