

**Swisscom (Schweiz) AG**  
Contact Center  
CH-3050 Bern

[www.swisscom.ch](http://www.swisscom.ch)

SAP 10035341 02/2013

Swisscom TV bedienen  
Utiliser Swisscom TV  
Utilizzare Swisscom TV  
Using Swisscom TV

S. 4

p. 14

p. 24

p. 34



swisscom

## Inhaltsverzeichnis

Wie starte ich Swisscom TV?	4
Fernsehen	5
Funktionen und Einstellungen	6
Tasten für die Navigation	6
Fernbedienung	7
Aufnehmen und Abspielen (TV plus)	8
Weitere Funktionen von Swisscom TV	10
Bildschirmeinstellungen	12
Kundencenter	13

## Table des matières

Comment démarrer Swisscom TV?	14
Regarder la télévision	15
Fonctions et paramètres	16
Touches de navigation	16
Télécommande	17
Enregistrer et visionner (TV plus)	18
Autres fonctions de Swisscom TV	20
Paramètres d'écran	22
Espace clients	23

## Indice

Come avviare Swisscom TV?	24
Guardare la televisione	25
Funzioni e impostazioni	26
Tasti per la navigazione	26
Telecomando	27
Registrazione e riproduzione (TV plus)	28
Ulteriori funzioni di Swisscom TV	30
Impostazioni dello schermo	32
Area clienti	33

## Table of contents

 
How do I start Swisscom TV?	34
Watching TV	35
Functions and settings	36
Navigation buttons	36
Remote control	37
Recording and viewing (TV plus)	38
Other Swisscom TV functions	40
Screen settings	42
Customer Center	43

# How do I start Swisscom TV?

## Switching Swisscom TV on

### 1. TV Box remote control


- > Press the **POWER** button.  
The **Standby** display is white.

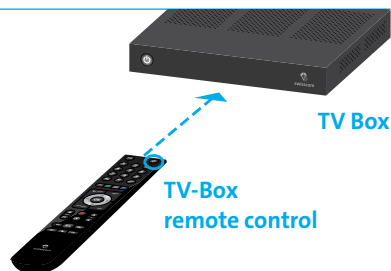

### 2. TV remote control

- > Switch the **TV** on.

 If no image appears:  
select an **HDMI or AV channel** – most TV remote controls have **one** of the following buttons allowing you to do so:

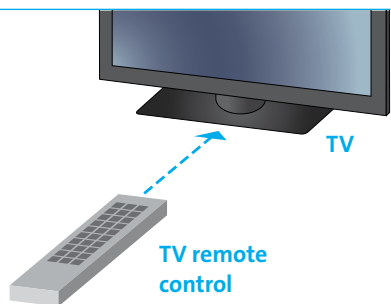

#### «What is the HDMI/AV channel?

The HDMI/AV channel corresponds to the port at the back of your TV set where you insert the HDMI (or SCART) cable.»



#### «Which remote control do I use?

When you are watching Swisscom TV, you need the TV remote control to switch the TV on and select the right HDMI/AV channel to watch Swisscom TV.»



The **start screen** shows details of current programmes, rented films, live sporting events, as well as news and weather.

- > **up/down** buttons, **left/right** buttons: select the content you want + **OK**

# Watching TV

 
## Finding and selecting programmes

### Switching between channels

- > **PROGRAMME** buttons:  
switch between channels

### Switching with the picture-in-picture function (preview screen)

- > **up/down** buttons:  
the next channel is displayed in the preview screen
- > **OK** button:  
change the channel
- > **left/right** buttons:  
preview of upcoming programmes
- > **OK** button:  
display further programme information

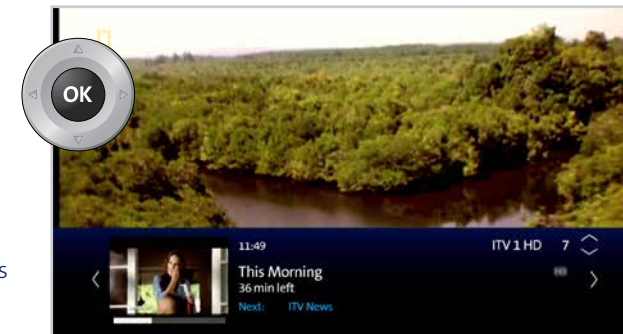

### With the TV Guide (electronic programme guide)

- > Press the **TV GUIDE** button
- > **up/down** button:  
navigate through the channels
- > **left/right** buttons:  
navigate by time
- > **OK** button:  
go to current channel or record the upcoming programme



 
In the bottom part of the screen you can see the name, start time and a short description of the selected programme.

«Click the **INFO** button to display the info page. To quit this info page and go back to the **TV Guide**, click the **EXIT** button.»



# Functions and settings

**Menu** **MENU** button:  
You can find **all the Swisscom TV functions** here.

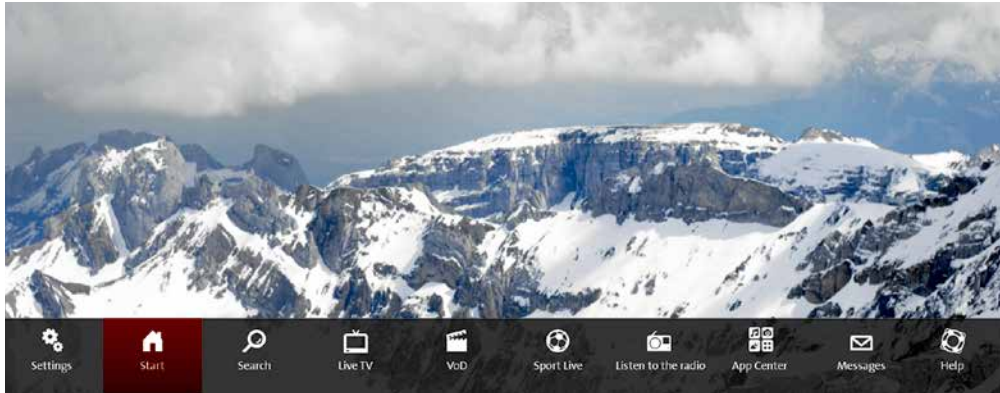

You can select some of the **functions** directly here.  
To do so, use the buttons on the right side.

# Navigation buttons

**left/right** buttons,  
**up/down** buttons:  
move through the menu or other functions

**OK** button:  
select/confirm the highlighted field

**EXIT** button:  
press once briefly: go back to previous step/menu point  
press and hold: hide the menu and return to the programme you last viewed



# Remote control



# Recording and viewing for TV plus only

## Current programme

**When you are watching TV, the programme you are currently watching is temporarily recorded.**

This allows you to pause the programme and/or rewind whenever you want. The temporary recording only works **as long as you keep watching the same channel**. As soon as you change channels, the previous temporary recording is deleted and the programme you are currently watching is temporarily recorded.

### «Live Pause»

(Temporary programme recording)

> **PAUSE/PLAY** button:  
pause current programme

 
> **PAUSE/PLAY** button:  
continue current programme

### Rewind and fast forward

> **REW/FF** buttons:  
quick rewind and fast forward within a temporarily recorded programme

> **REPLAY** button:  
rewind 7 seconds


> **SKIP** button:  
fast forward 30 seconds

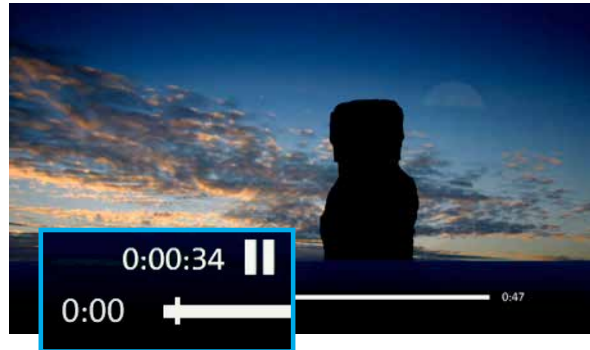

## Recording

> **RECORD** button:  
record current programme

 **Note:** The recording stops automatically when the current programme has ended.

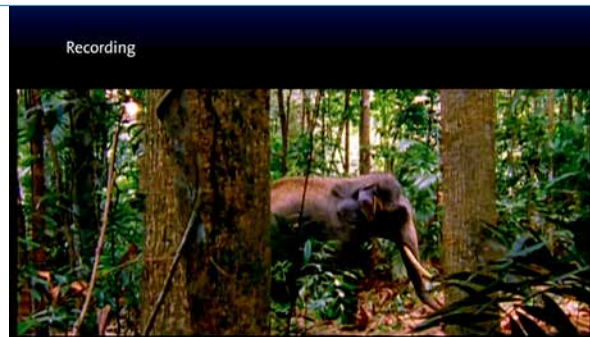

A message indicating that the programme is being recorded is displayed on the top of the screen.

## Programmes from the TV Guide

### Recording a single programme

> Press the **TV GUIDE** button

> **up/down** button:  
navigate through the channels

> **left/right** buttons:  
navigate by time

> **RECORD** button:  
the selected programme will be recorded (●)

### Series recording

You can also record a programme series. This means that **all future episodes of this series will be recorded**.

> Press the **RECORD** button twice (●●)

### Delete a programmed recording

 
> Select the programme and press the **RECORD** button until the red dot disappears.

### Watching recorded programmes

> Press the **RECORDINGS** button

> **up/down** buttons:  
select recording + **OK**


> **Play** + **OK**

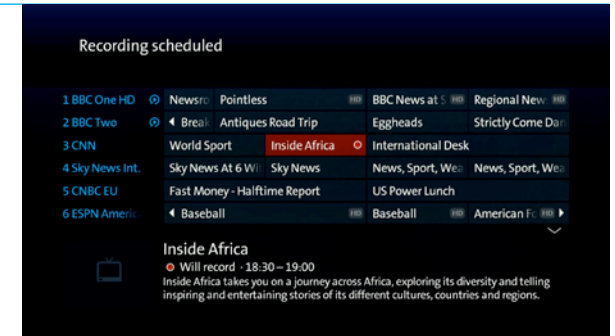

The **red line** indicates the currently selected programme. The red dot ● marks the programmes that will be recorded.



 Three overlapping red dots ●●● mark the series recordings.

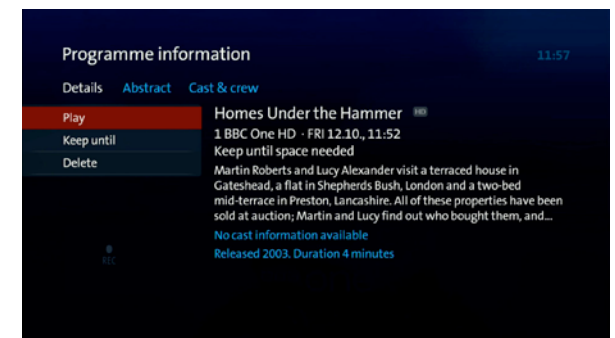

«A recording is automatically deleted, if the storage space on your TV box is required for new recordings. You can change this standard setting as follows:

> select a recording + **OK** > **Keep until** + **OK** > ...»

# Other Swisscom TV functions



## 1 Rent sporting events

**SPORT**  
 ▲ ▼ ◀ ▶ + OK navigate with the arrow keys, click on an event and confirm the rental.  
 A rented event may also be recorded.

## 2 Listen to the radio

**RADIO**  
 ▲ ▼ > OK Radio menu  
 select radio station  
 If you have connected your stereo or your Home Cinema system to your TV Box, you can turn off the TV set and still listen to the radio.  
**Warning:** If you have «DSL start» to access the Internet, you can only listen to Internet radio if you start the Internet on your computer.

## 3 Switching to the original language

**OPTIONS**  
**Language** select  
 ▶ select language  
**Note:** **OPTIONS** offers you helpful functions in the television, TV Guide and search modes.

## 4 Rent films

**VIDEO**  
 ▲ ▼ ◀ ▶ + OK Video on Demand (VoD)  
 navigate by using the arrow buttons  
 Click on a category listed on the left then select a film.  
 Click **Rent**. You can also **Save** videos.  
 Rented and saved (bookmarked) films can be found under **My Videos** on the left. You can watch rented videos as many times as you want during the rental period.

## 5 MENU + ◀ ▶ navigate in the Menu:

### Search

Search by the name of a programme, a video, an actor or the name of a channel.  
 🔍 + OK open **Search**  
 ▲ ▼ ◀ ▶ + OK enter the letters individually using the input grid

### Starting the Swisscom TV Apps

📱 + OK open the **App Center**  
 ▲ ▼ ◀ ▶ select an app  
 Swisscom TV Apps let you view the current weather forecasts, read the latest news and enjoy your photos in large format all for free. You can also find recommendations for TV shows, films and sporting events here as well as access stock market information, listen to music from your PC and play a variety of different games.

### Power-saving mode

⚙️ **Settings**  
 ▲ + OK **General**  
 ▼ + OK **Power Management** activate/switch off  
 In the power-saving mode, the TV Box takes a few minutes to start up. This uses approx. 50% less electricity. Planned recordings are also performed in power-saving mode.

### Activate Replay


The «**Replay**» function lets you watch all shows broadcast on the available channels during the last 30-hour period. Use of this offer is included in your subscription and just requires one-off approval from you.  
 ⚙️ **Settings**  
 ▶ + OK select **TV Guide**  
 ▼ + OK select **Replay**

# Screen settings

## Change screen language

> Press the  **MENU** button,

select **< Settings >**,  
select **General + OK**,  
select **On-screen language + OK**

>  **up/down** buttons:  
select the language + **OK**,  
confirm with **Save + OK**

 


## Change screen format

> Press the  **MENU** button,

select **< Settings >**,  
select **General + OK**,  
select **Screen aspect ratio + OK**

>  **with up/down** buttons:  
select screen format and  
resolution + **OK**  
confirm with **Save + OK**

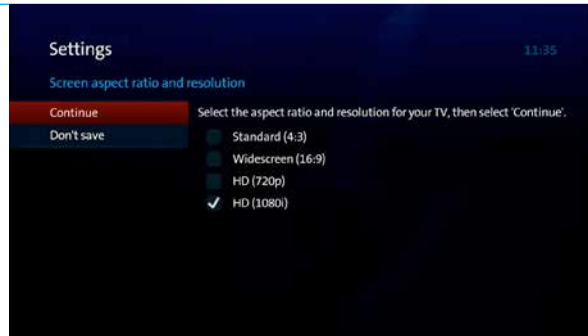

Make sure that you have set the TV Box picture size to best fit your TV set (please refer to your TV set manual). Your TV set must be set on the same screen format as the TV Box.

**Note:** If you select «HD 720p» or «HD 1080i» a test screen will appear first: confirm with **OK**.

## Optimising the picture quality: video instructions

You need the TV or the projector remote control here. Get familiar with the TV or projector screen menu. Where do you set the brightness, the contrast, the colour intensity ... (usually in «menu» or «settings»)?

> Press  **MENU** button,

select **< Settings >**,  
select **General + OK**,  
select **Picture settings + OK**

>  **PAUSE/PLAY** button:  
the video is now paused

>  **PAUSE/PLAY** button:  
continue video



# Customer Center

 
Changing your Swisscom TV settings easily on your computer.

## Changing the settings in the Customer Center

**Channel settings:** show and hide TV channels, change channel sequence


**Additional channels:** order at «change Swisscom TV»

**Settings:** cost limit, parental control PIN, purchase PIN

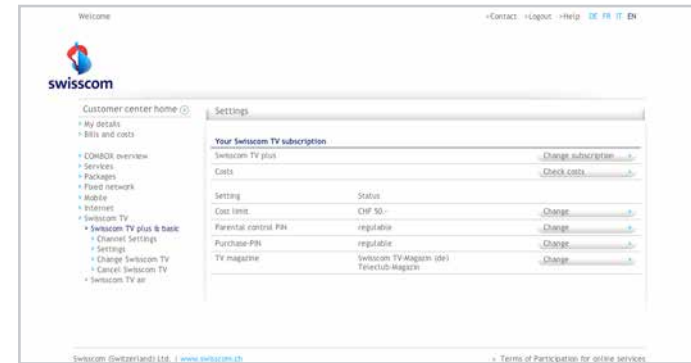

## To access the Customer Center

 1. Enter [www.swisscom.com/login](http://www.swisscom.com/login) in your Internet browser.
2. Enter your Swisscom login (username/password).

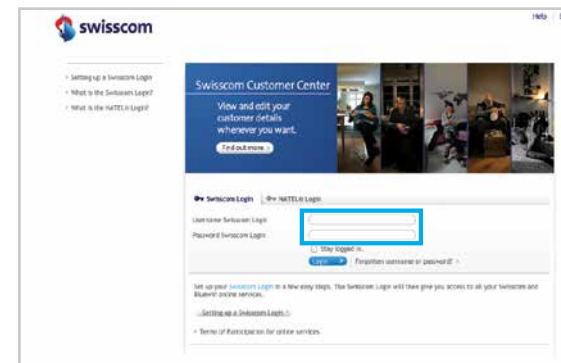

3. On the left side, click on **Swisscom TV**.