


Gigaset Maxwell C

Quick and easy to set up

(Deutsch auf der Rückseite)

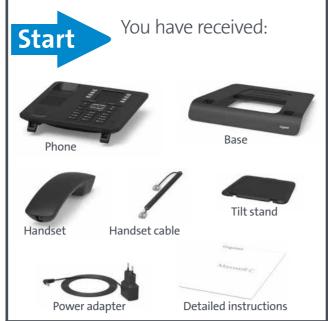

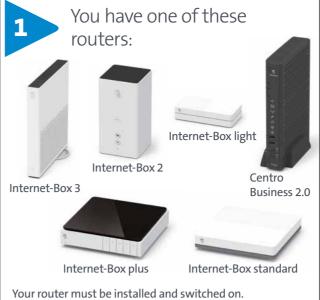

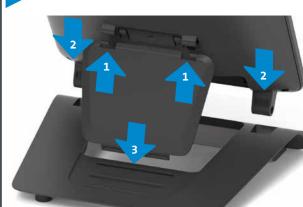

Place the phone in the base

and secure the tilt stand.

First slide the tilt stand into the phone holder and then insert it in the base in the desired position.





Connect the handset to the phone.



The cable end with the longer straight cable piece is connected to the phone , the other end to the handset.



Connect the phone close to the router.



After installation you can connect the telephone to the power socket of your choice.

More information for Swisscom customers at www.swisscom.ch/hdphones-help



You have now set up your Gigaset Maxwell C. You can now plug the phone into any power socket of your choice.

Press the connection button on your router.



Wait for the phone to connect.

If the connection hasn't worked, return the phone to login mode and repeat this step.

You can see the registration mode of the phone in the menu under > Settings > Registration > Register Handset > OK



Select your language.



www.gigaset.com/service