**HD-Phone Ascona setup** 

Make calls in HD sound quality



www.swisscom.ch/hdphones-help

Swisscom (Switzerland) Ltd.

www.swisscom.ch 0800 800 800



Installation overview

swisscom









Press Register.



The next two steps will allow you to connect your HD-Phone to your Internet-Box.

Take your HD-Phone and go to the place your Internet-Box is installed and press OK.



Press the + button on your Internet-Box.



We recommend you to charge your phone for at least 15 hours once you have set it up.

Easily transfer your Connect the adapter to the 8 smartphone contacts to your power socket of your choice. Please refer to the **«Phonebook»** 



You have now set up your HD-Phone Ascona.



Wait for the HD-Phone to connect.

If connecting your Internet-Box didn't work, repeat steps 4 – 6.



HD-Phone.

section on the backside.

# Tips and infos on making calls

#### What does HD quality mean?

HD stands for High Definition. HD telephony means making calls in high sound quality. If both you and the person you are calling are using an HD-Phone over the Internet, your conversation will be in HD quality.

#### Phonebook

All your HD-Phones access the Internet-Box phonebook.

#### **Transfer smartphone contacts**



Use the Internet-Box app to transfer your smartphone contacts to the Internet-Box phonebook at the press of a button.

You can find the Internet-Box app at:







You can easily edit contacts directly on the HD-Phone or Internet-Box web portal at http://internetbox. For additional details visit www.swisscom.ch/internetbox-phonebook

### Before replacing the Internet-Box or a reset save the

Internet-Box plus/standard

http://internetbox > Settings > Save configurations

http://internetbox > Advanced > Save current configuration

### **Short dialling**

#### Set up short dialling

Menu > Phonebook > Speed dialing > save required telephone number under numbers 0-9. No. 1 is reserved for the COMBOX®

#### To call the saved number.

press the key assigned to the phone number for a long time.

#### **COMBOX®**

#### **Program COMBOX®**

Menu > Settings > Advanced settings > COMBOX® setup > Enter your fixed network phone including prefix (e.g. 0448008080).

You can access your COMBOX® by pressing the «1» key for a long time (pre-programmed short dial). More info at www.swisscom.ch > Fixed network > COMBOX®

#### MultiLINE option

With the chargeable MultiLINE option you have three phone numbers on two lines overall.

You can define the settings for the incoming and outgoing numbers at:

Internet-Box plus/standard

http://internetbox > Telephony > Settings

http://internetbox > Telephony > Handsets

For general information about MultiLINE visit www.swisscom.ch/multiline

### Keys and functions



#### Display icons



Normal reception



Flashes: Phone not within range



> Reduce the distance to the Internet-Box.



Ecomode plus

Ecomode plus is an environmentally friendly system that reduces electricity consumption and offers a variable reduction of transmission power. Transmission power is reduced by 100% as soon as Ecomode plus is activated.



Charge level display



Keypad is locked. > Press \* key to unlock



Ringtones and notification alerts are switched off. > Press 💢 key to switch on



Missed calls

#### Menu icons



Phonebook



COMBOX® (answering machine)





Accessories (alarm clock/timer)



Melodies



Settings

### Loudspeaker function

You can easily make calls with the loudspeaker function regardless of location. The base station is a charger and hands-free kit in one.

- 1. Take a call by pressing the **/** button.
- **2.**To use the loudspeaker, place your phone in the cradle during the call. The sound is automatically sent over the loudspeaker. You can also disconnect the charger from the power and use the loudspeaker wirelessly.



3. End the call by pressing the **—** button

Please note that you have to reconnect the base station to the power to charge the phone.



The loudspeaker function is set up as standard. If you wish to change this, select

> Menu > Settings > Auto hang / Auto pick up.

## Safety instructions

#### Please note

- > Protect your hearing: Ringtones and notification alerts are transmitted on the handset over the loudspeaker. Please do not hold the handset up to your ear when one of those
- functions is switched on your hearing may otherwise be impaired.

  In case of power outage, no emergency calls can be made with this handset. Please ensure that other calling options are available if needed.

  Only use the handset in ambient temperatures from +5 to +40 degrees Celsius and
- protect it from direct sunlight
- Do not use the handset/charger in potentially explosive environments (e.g. paintshops petrol stations etc.).
  > Do not place the handset / charger in bathrooms or wet areas.

#### Impairment due to radio signals

- The functioning of medical equipment may be impaired by the radio signals.
   Hearing device wearers should note that when using the handset, radio signals in the hearing device might interfere and cause unpleasant buzzing sounds.

#### Rechargeable batteries

- Please use only NiMH AAA rechargeable batteries.
   Do not use any other chargers, as the rechargeable batteries may otherwise be
- uaniageu.

  > Avoid batteries coming into contact with water or fire.

  > During charging batteries may heat up. This is normal and not dangerous



Return your device to Swisscom



Handset and charger compliance to EU Directive 99/5/EC on radio systems and telecommunication equipment is certified by the CE symbol. The handset complies with CAT-iq Standard 2.0. The conformity declaration is available on the following website: