



Yealink T46S

Quick and easy to set up


➔ You have received:



1 You have one of these routers:



 
2 Attach the phone to the base.

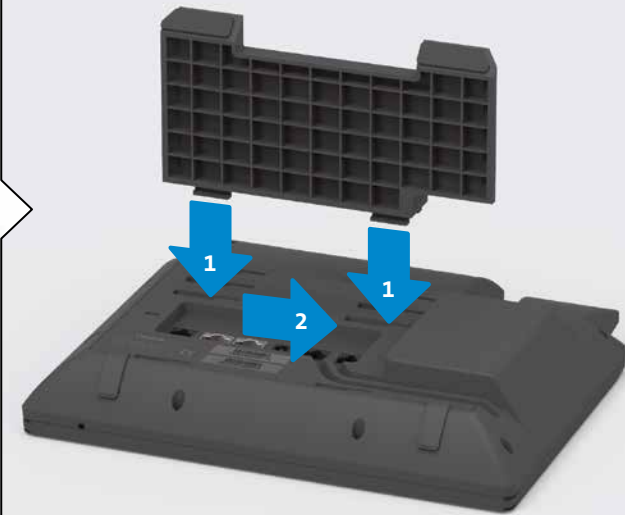

Installation overview



 3 Connect the handset to the socket ↻.

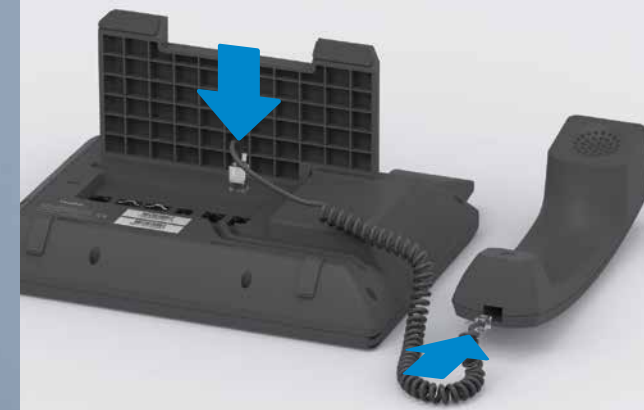

You can also use a headset. Connect it to the 🎧 socket.

4 Connect the phone to the router using the supplied Ethernet cable.



6 Check the display.



On the display, you will see how far the installation has progressed. Choose your language when requested.

5 Connect the power adapter.



Your Yealink T46S is now set up.



Eine ausführliche Anleitung finden Sie unter:
www.swisscom.ch/devices-help

KKD+JM (B2C-TSP-UID) 01/2021 EN

Multiple numbers


Your telephone numbers are shown on the left of the display. Use the «additional telephone numbers» key to switch between the display of telephone numbers 1 - 5 and 6 - 10.

Outgoing calls

The light blue telephone number is automatically used for outgoing calls (telephone number 1 in the default settings). You can use the navigation keys   to reset the outgoing telephone number.

If you want to use another telephone number for an outgoing call as a one-off, select the corresponding key before you enter the number.

Incoming calls

You can receive incoming calls on all telephone numbers. You can use the «Do not disturb» key to block individual telephone numbers for incoming calls. Blocked telephone numbers are marked with the do not disturb icon .

Contact directories

 
 
With inOne PMI office, three telephone directories are available on the Yealink T46G: the internal employee directory, the external directory and a local directory.

Under the menu item «Business telephony» in My Swisscom (www.swisscom.ch/login), you can manage the «internal employee directory» and the «external directory» which are available for all telephones connected to Centro Business, unless otherwise specified.

You can also use the telephone to save personal numbers in the «local directory». The «local directory» is also available for all Vivo customers.

Programming short dialling numbers

Programme a programmable key as short dial key

> Keep the programmable key pressed > With the navigation key   select the short dialling function > Save

The short dialling key can now be labelled:
> use the keys to type in the label under «Label»
> and enter the telephone number under «Value».

Using the short dialling number

Press on the programmed short dialling key.

Change phone number

You can change the telephone number at www.swisscom.ch/login > Business Telephony.

COMBOX®

You can access your COMBOX® by pressing the MESSAGE key .

For more details, go to www.swisscom.ch/login > COMBOX®








Keys and functions

What does HD quality mean?





HD stands for High Definition. HD telephony means making calls in high sound quality. If both you and the person you are calling are using an HD-compatible device over the Internet, your conversation will be in HD quality.




Display icons


-  Your telephone is not connected with the router. Please check your Internet connection.
-  Loudspeaker mode
-  COMBOX® message
-  Do not disturb mode
-  Ringtone volume
-  Missed calls
-  Call forwarding is set up.


LEDs

-  The telephone is switching on.
-  The telephone is ringing.
-  A phone call is taking place.
-  Flashing quickly – this telephone number is taking an incoming call.
Flashing slowly – the call is held.

Reset

Reboot device:
Press  key for 6 seconds

Reset device to factory settings (this deletes all local settings and contacts from your device):
Press  key for 6 seconds.


 Before you return the device you need to reset to factory settings. Return your device to Swisscom or hand it in at a specialist store.

Safety information

- Please note**
- > Only use the power adaptor supplied.
 - > This telephone cannot be used to make emergency calls during a power cut. Make sure you have other phones available if required.
 - > Only operate the phone in temperatures between 0 and 40 degrees Celsius and keep it out of direct sunlight.
 - > Protect your phone from dampness, moisture and liquids. In order to avoid electric shocks, we recommend that you do not open up the phone.
 - > Do not use the phone in locations where explosions may occur (e.g. paint shops, petrol stations, etc.).
 - > Do not install the phone in a bathroom or shower room.
 - > Only clean the phone with a damp (not wet) cloth or anti-static cloth. Do not use a dry cloth due to the risk of a static charge!
 - > Never spray cleaning liquids directly onto the phone.
 - > Please do not use the phone during a thunder storm (risk of lightning strike). In order to prevent damage to the phone, unplug the phone from the mains during thunder storms.

Copyright notice and license information

In using the Yealink T46S, the user accepts that he or she is receiving open source software. Further information can be found in the enclosed information sheet or at www.yealink.com

 The device's conformity with EU Directives 2004/108/EC and 2006/95/EC is confirmed by the CE symbol. The declaration of conformity is available on the following website: www.swisscom.ch/devices-help