



Yealink T54W

Quick and easy to set up

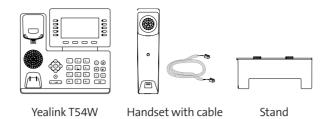



Ethernet cable

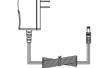

Power adapter


Quick Start Guide

1 Compatible with: Centro Business 2/3 All Internet-Boxen




Your router must be installed and switched on.

2 Attach the stand to the phone.

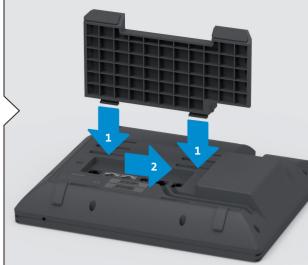

3 Connect the handset to the socket .

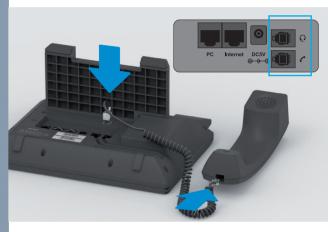

You can also use a headset. Connect it to the socket.

4 Connect the phone ("Internet" socket) to the router using the supplied Ethernet cable.



Installation overview



Your Yealink T54W is now set up.



KKD+JM (B2C-TSP-UID) 08/2025 EN

You can find detailed instructions at: www.swisscom.ch/devices-help

6 Check the display.



On the display, you will see how far the installation has progressed. Choose your language when requested.

5 Connect the power adapter.



Swisscom (Switzerland) Ltd.

Postfach 3050 Bern www.swisscom.ch/devices-help 0800 800 800

Multiple numbers

Your telephone numbers are shown on the left of the display. Use the «additional telephone numbers» key to switch between the display of telephone numbers 1 - 5 and

Outgoing calls

The light blue telephone number is automatically used for outgoing calls (telephone number 1 in the default settings). You can use the navigation keys to reset the outgoing telephone number.

If you want to use another telephone number for an outgoing call as a one-off, select the corresponding key before you enter the number.

Incoming calls

You can receive incoming calls on all telephone numbers. You can use the «Do not disturb» key to block individual telephone numbers for incoming calls.

Blocked telephone numbers are marked with the do not disturb icon

Contact directories

With a Yealink T54W, you can use two types of contact directories: the central phone book and the local directory.

Central phone book

Contacts stored in the central phone book are securely saved online, ensuring they remain safe even if your phone is reset, lost, or replaced. To manage or sync your contacts, please follow the steps below

My Swisscom Business users:

- Login at https://extranet.swisscom.ch/b2b/dashboard
- Select your subscription.
- Go to Telephony > My Phone Numbers for details on syncing your existing contacts with the central phone book.

My Swisscom users:

- Login at https://www.swisscom.ch/login
- Go to Fixed network > "Your fixed network contacts" to add, modify, and delete contacts
- For business subscriptions: Find more in Business Telephony > Manage central telephone book.

Local directory

You can add, edit, and delete contacts directly on the Yealink T54W to manage your local directory. Please keep in mind that any local contacts and changes made on your device will be lost if the device is reset or lost, as these contacts are not saved online

Programming short dialing number

Program a key as short dial key

> Keep the programmable key pressed > With the navigation key select the short dialling function

The short dialling key can now be labelled: > use the keys to type in the label under «Label» > and enter the telephone number under «Value».

Using the short dialling number

Press on the programmed short dialling key.

Keys and functions

HD stands for High Definition. HD telephony means making calls in high sound quality. If both you and the person you are calling are using an HD-compatible device over the Internet, your conversation will be in HD quality.



Change phone number

You can configure the phone number used for outgoing calls in the customer portal.

My Swisscom Business (https://extranet.swisscom.ch/b2b/ dashboard): Telephony > Devices

My Swisscom (https://www.swisscom.ch/login): Home > Fixed network > Landline settings > Devices





A phone call is taking place.

Flashing quickly – this telephone number is taking an incoming call.

Flashing slowly – the call is on hold.

Safety information

- Please note

 > Only use the power adaptor supplied.

 > This telephone cannot be used to make emergency calls during a power cut. Make sure you have other phones available if required
- Only operate the phone in temperatures between 0 and 40 degrees Celsius and keep it out of direct sunlight.
 Protect your phone from dampness, moisture and liquids. In order to avoid electric
- shocks, we recommend that you do not open up the phone
- > Do not use the phone in locations where explosions may occur (e.g. paint shops, petro
- > Only clean the phone with a damp (not wet) cloth or anti-static cloth. Do not use a dr cloth due to the risk of a static charge!

 Never spray cleaning liquids directly onto the phone.

 Please do not use the phone during a thunder storm (risk of lightning strike). In order
- to prevent damage to the phone, unplug the phone from the mains during thunde

COMBOX®

You can access your COMBOX® by pressing the MESSAGE

For details, please go to the customer portal.

My Swisscom Business: Telephony > Manage COMBOX® My Swisscom: Home > COMBOX®

Reset

Reboot device:

Press key for 6 seconds

Reset device to factory settings (this deletes all local settings and contacts from your device): Press ok key for 6 seconds.



Before you return the device you need to reset to factory settings. Return your device to Swisscom or hand it in at a specialist store.

Display icons



Wired network is unavailable



Speakerphone (hands-free) mode



Voice Mail



Do Not Disturb (DND)



Silent Mode



Missed Calls

Copyright notice and license Information



The device's conformity with EU Directives 2014/35/EU and 2014/30/ EU is confirmed by the CE symbol. The declaration of conformity is available on the following website: www.swisscom.ch/devices-help