

HD-Phone Arosa setup

Make calls in HD sound quality



Start You have received:



1 Your Internet-Box must be installed and switched on.



2 Insert the batteries and close the compartment with its cover.



3 Select your language.



Installation overview



4 Press Register.



The next two steps will allow you to connect your HD-Phone to your Internet-Box.

5 Take your HD-Phone close to your Internet-Box.



Press OK.

8 Success! You have now set up your HD-Phone Arosa.



N.B. Use the Internet-Box app to easily transfer all your smartphone contacts to your HD-Phone at the press of a button. See back for more details.

7 Connect the adapter the power socket of your choice.



We recommend you to charge your HD-Phone for 15 hours without interruption after set-up.

6 Press the + button on your Internet-Box.



Wait for the HD-Phone to connect.

www.swisscom.ch/hdphones-help

Swisscom (Switzerland) Ltd.
Contact Center
CH-3050 Bern

www.swisscom.ch
0800 800 800


480-29871-000003 253593103 E 01/2015 EN


HD telephony

What does HD quality mean?

HD stands for High Definition. HD telephony means making calls in high voice quality. If both you and the person you are calling are using an HD-Phone, your conversation will be in HD quality.



Display icons

 Flashes: Phone not within range
> Reduce the distance to your base station.

 Ecomode plus
In standby mode your HD-Phone Arosa switches to Ecomode plus within a short time. This means that your phone and Internet-Box do not transmit any DECT signal.

 Charge level display

 Keypad is locked
> Press  key to unlock

 Ringtones and notification alerts are switched off.
> Press  key to switch on

 Missed calls

Phonebook

All your HD-Phones access the Internet-Box phonebook.

Transfer smartphone contacts
Use the Internet-Box app to transfer your smartphone contacts to the Internet-Box phonebook at the press of a button.



Edit contacts
You can easily edit contacts directly on the HD-Phone or Internet-Box web portal at <http://internetbox>. For additional details visit www.swisscom.ch/internetbox-phonebook


N.B. Before replacing the Internet-Box or a reset save the settings at <http://internetbox> > Settings > Configuration

Keys and functions



More functions

Adjust volume during a call

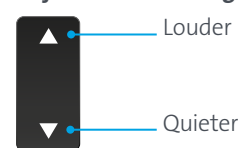

Set up short dialling

Menu > Phonebook > Speed Dialling > Save required phone number under No. 0 – 9. No. 1 is reserved for your COMBOX®.

To call the saved number, press the key assigned to the phone number for a long time.

Alarm clock







Menu > Accessories > OK > Alarm > Edit > On > Set time > OK

Program COMBOX®

Menu > COMBOX® > Edit > Complement 086 with your fixed network phone number including prefix (e.g. 0860448008080)

You can access your COMBOX® by pressing the 1 key for a long time (pre-programmed short dial). More info at www.swisscom.ch > Fixed network > COMBOX®

Menu icons

-  Phonebook
-  COMBOX® (answering machine)
-  Calls
-  Accessories (alarm clock / timer)
-  Melodies
-  Settings

MultiLINE option

With the chargeable option MultiLINE, you can have several telephone numbers. You can define settings for the incoming and outgoing numbers at <http://internetbox> > Telephony > Settings.

For general information about MultiLINE go to www.swisscom.ch/multiline

Troubleshooting

Connection failed

Try to connect again if you fail to connect your HD-Phone with your Internet-Box / the base station. Press «Register».

Safety instructions

Please note

- > Protect your hearing: Ringtones and notification alerts are transmitted on the handset over the loudspeaker. Please do not hold the handset up to your ear when one of those functions is switched on – your hearing may otherwise be impaired.
- > In case of power outage, no emergency calls can be made with this handset. Please ensure that other calling options are available if needed.
- > Only use the handset in ambient temperatures from +5 to +40 degrees Celsius and protect it from direct sunlight.
- > Do not use the handset/charger in potentially explosive environments (e.g. paintshops, petrol stations etc.).
- > Do not place the handset / charger in bathrooms or wet areas.

Impairment due to radio signals

- > The functioning of medical equipment may be impaired by the radio signals.
- > Hearing device wearers should note that when using the handset, radio signals in the hearing device might interfere and cause unpleasant buzzing sounds.

Rechargeable batteries

- > Please use only NiMH AAA rechargeable batteries.
- > Do not use any other chargers, as the rechargeable batteries may otherwise be damaged.
- > Avoid batteries coming into contact with water or fire.
- > During charging batteries may heat up. This is normal and not dangerous.



> Return your device to Swisscom or hand it in at a specialized store.



> Handset and charger compliance to EU Directive 99/5/EC on radio systems and telecommunication equipment is certified by the CE symbol. The handset complies with CAT-iq Standard 2.0. The conformity declaration is available on the following website: www.swisscom.ch/hdphones-help