

HD-Phone Zermatt setup

Make calls  
in HD sound  
quality



Start

You have received:



1


You have one of these Internet-Boxes.



Your Internet-Box must be installed and switched on.

2

Pull the red tab out from the phone.

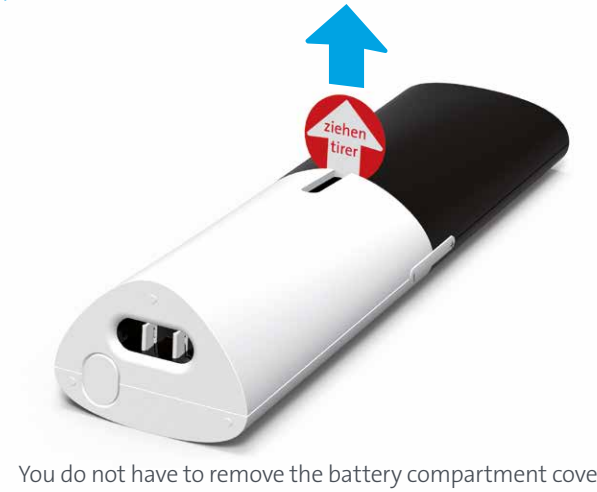

You do not have to remove the battery compartment cover.

Installation overview



3

Select your language.




4

Take your HD-Phone and go to the place your Internet-Box is installed.



5

Press the + button on your Internet-Box.

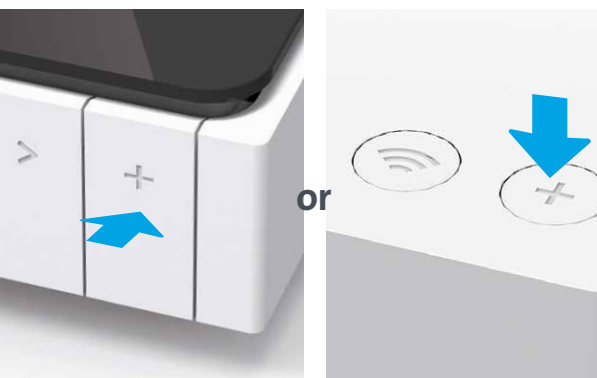

**Wait for the HD-Phone to connect.**  
If connecting your Internet-Box didn't work, repeat steps 4–5.

Easily transfer your smartphone contacts to your HD-Phone. Please refer to the «**Phonebook**» section on the backside.


7



You have now set up your HD-Phone Zermatt.

Connect the adapter to the power socket of your choice or directly over the USB connection on your Internet-Box.

6

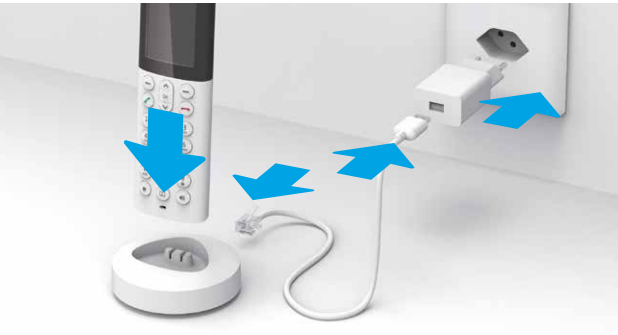

We recommend you to charge your phone for at least 15 hours once you have set it up.

[www.swisscom.ch/hdphones-help](http://www.swisscom.ch/hdphones-help)

Swisscom (Switzerland) Ltd.  
Contact Center  
CH-3050 Bern

[www.swisscom.ch](http://www.swisscom.ch)  
0800 800 800

KKD+JM (RES-CWE-UID) 91-008768-010-100 11/2015 EN

# Tips and infos on making calls

## What does HD quality mean?

HD stands for High Definition. HD telephony means making calls in high sound quality. If both you and the person you are calling are using an HD-Phone over the Internet, your conversation will be in HD quality.

## Phonebook

All your HD-Phones access the Internet-Box phonebook.

### Transfer smartphone contacts

Use the Internet-Box app to transfer your smartphone contacts to the Internet-Box phonebook at the press of a button. You can find the Internet-Box app at:



### Edit contacts

You can easily edit contacts directly on the HD-Phone or Internet-Box web portal at <http://internetbox>. For additional details visit [www.swisscom.ch/internetbox-phonebook](http://www.swisscom.ch/internetbox-phonebook)

**Before replacing the Internet-Box or a reset save the settings at:**

Internet-Box plus/standard:  
<http://internetbox> > Settings > Save configurations  
Internet-Box light:  
<http://internetbox> > Advanced > Save current configuration

## Short dialling (numbers 0 to 9)

You can assign numbers 0–9 for the phone numbers that are important to you.

### Set up short dialling

> Quickdial > Select number > Options > Dial number > OK

**To call the saved number,**  
press the key assigned to the phone number for a long time.

## MultiLINE option

With the chargeable MultiLINE option you have three phone numbers on two lines overall. You can define the settings for the incoming and outgoing numbers at:


Internet-Box plus/standard:  
<http://internetbox> > Telephony > Settings  
Internet-Box light:  
<http://internetbox> > Telephony > Handsets

For general information about MultiLINE visit [www.swisscom.ch/multiline](http://www.swisscom.ch/multiline)

# Keys and functions



# Display icons

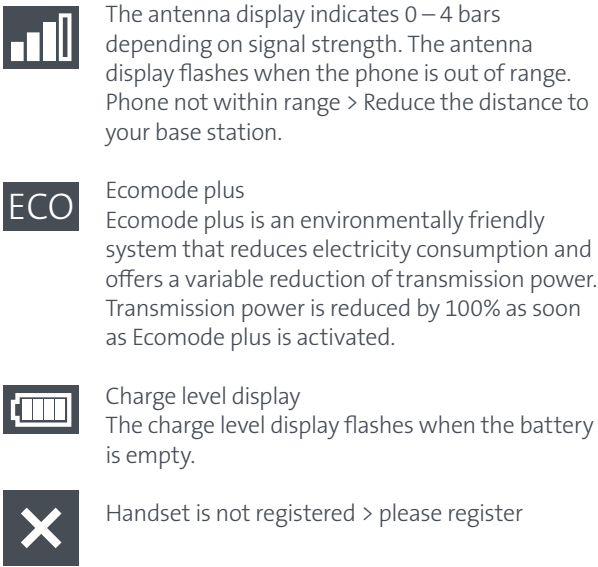

# Babyphone

The HD-Phone receives no calls while the babyphone function is active.

Activate the babyphone function and enter a phone number (e.g. your mobile number) as recipient. The recipient's phone rings as soon as the baby makes a noise. When you activate the function, set whether the HD-Phone should ring at the least (Sensitivity High) or only louder (Sensitivity Low) baby noises.

**To activate:** > Menu > Settings > Babyphone > Select sensitivity > Dial number > Save

Place the HD-Phone around 1–2 metres away from your baby and point the microphone at the baby.

**To deactivate:** > OFF > OK

# Manual connection

You can connect the HD-Phone to the Internet-Box / base station manually. Press > Menu > Settings > Advanced settings > Connection > Connect > OK, and then press the + button on the Internet-Box.

# Safety instructions

**Please note**

- > Protect your hearing: Ringtones and notification alerts are transmitted on the handset over the loudspeaker. Please do not hold the handset up to your ear when one of those functions is switched on – your hearing may otherwise be impaired.
- > In case of power outage, no emergency calls can be made with this handset. Please ensure that other calling options are available if needed.
- > Only use the handset in ambient temperatures from +5 to +40 degrees Celsius and protect it from direct sunlight.
- > Do not use the handset/charger in potentially explosive environments (e.g. paintshops, petrol stations etc.).
- > Do not place the handset / charger in bathrooms or wet areas.
- > Use only the adapter supplied (Manufacturer: Ten Pao International Ltd. / model number: 5005AYV0500050).
- > For pluggable equipment, the socket-outlet (power adaptor) shall be installed near the equipment and shall be easily accessible.

**Impairment due to radio signals**

- > The functioning of medical equipment may be impaired by the radio signals.
- > Hearing device wearers should note that when using the handset, radio signals in the hearing device might interfere and cause unpleasant buzzing sounds.

**Rechargeable batteries**

- > Please use only NiMH AAA rechargeable batteries (Manufacturer: GPI International Ltd. / model number: GNRHC103C000).
- > Do not use any other chargers, as the rechargeable batteries may otherwise be damaged.
- > Avoid batteries coming into contact with water or fire.
- > During charging batteries may heat up. This is normal and not dangerous.
- > CAUTION: risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

**Babyphone**

- > The activated function may shorten the HD-Phone's operating time. If necessary, place the HD-Phone on the charging station.
- > Check it is working after switching on! Test sensitivity and check whether the connection to the recipient (specified phone number) is working.
- > Please note that the babyphone does not work in exceptional cases, e.g. when the recipient is engaged or has no reception.

