

HD-Phone Montreux setup

Make calls
in HD sound
quality



Start The package includes:




1 You have one of these Internet-Boxes.



Your Internet-Box must be installed and switched on.

2 Pull the red tab out from the phone.

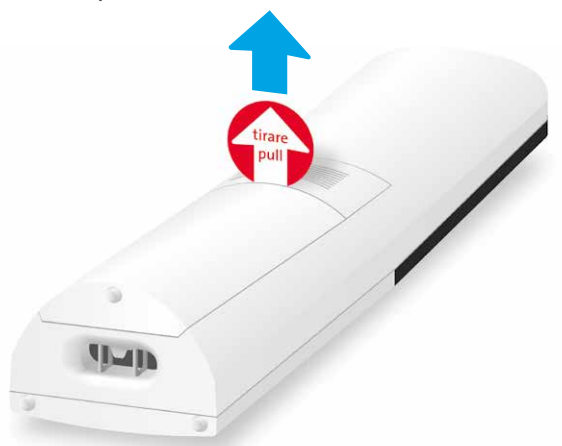


You do not have to remove the battery compartment cover.

Installation overview



 3 Select your language.

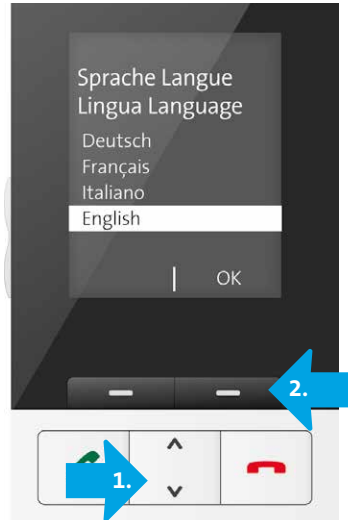

4 Take your HD-Phone close to your Internet-Box.




7 Easily transfer your smartphone contacts to your HD-Phone. Please refer to the «**Phonebook**» section on the backside.



You have now set up your HD-Phone Montreux.

6 Connect the adapter to the power socket of your choice.

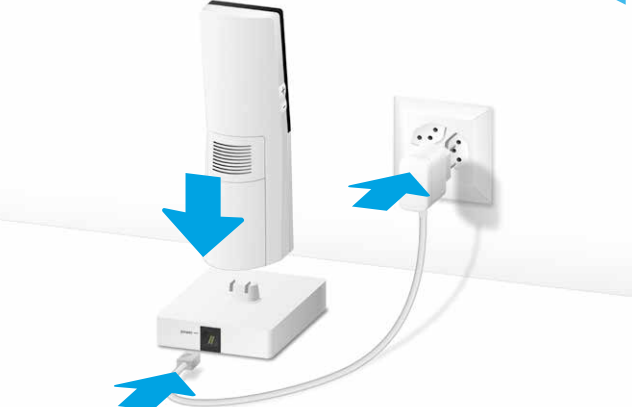

We recommend you to charge your HD-Phone for 12 hours without interruption after set-up.

5 Press the + button on your Internet-Box.



Wait for the HD-Phone to connect.
If connecting your Internet-Box didn't work, repeat steps 4 - 5.

www.swisscom.ch/hdphones-help

Swisscom (Switzerland) Ltd.
Contact Center
CH-3050 Bern

www.swisscom.ch
0800 800 800

HD telephony

What does HD quality mean?

HD stands for High Definition. HD telephony means making calls in high sound quality.
If both you and the person you are calling are using an HD-Phone, your conversation will be in HD quality.

MultiLINE option

With the chargeable MultiLINE option you have three phone numbers on two lines overall.
You can define the settings for the incoming and outgoing numbers at:

Internet-Box plus/standard:
<http://internetbox> > Telephony > Settings
Internet-Box light:
<http://internetbox> > Telephony > Handsets

For general information about MultiLINE visit www.swisscom.ch/multiline

Phonebook

All your HD-Phones access the Internet-Box phonebook.

Transfer smartphone contacts

Use the Internet-Box app to transfer your smartphone contacts to the Internet-Box phonebook at the press of a button.

Edit contacts

You can easily edit contacts directly on the HD-Phone or Internet-Box web portal at <http://internetbox>.
For additional details visit www.swisscom.ch/internetbox-phonebook

Before replacing the Internet-Box or a reset save the settings at:

Internet-Box plus/standard:
<http://internetbox> > Settings > Save configurations
Internet-Box light:
<http://internetbox> > Advanced > Save current configuration

COMBOX®

Program COMBOX®


Menu > Settings > Advanced settings > COMBOX® setup
> Enter your fixed network phone including prefix (e.g. 0448008080).

You can access your COMBOX®

by pressing the «1» key for a long time (pre-programmed short dial).

More info at www.swisscom.ch > Fixed network > COMBOX®

Keys and functions

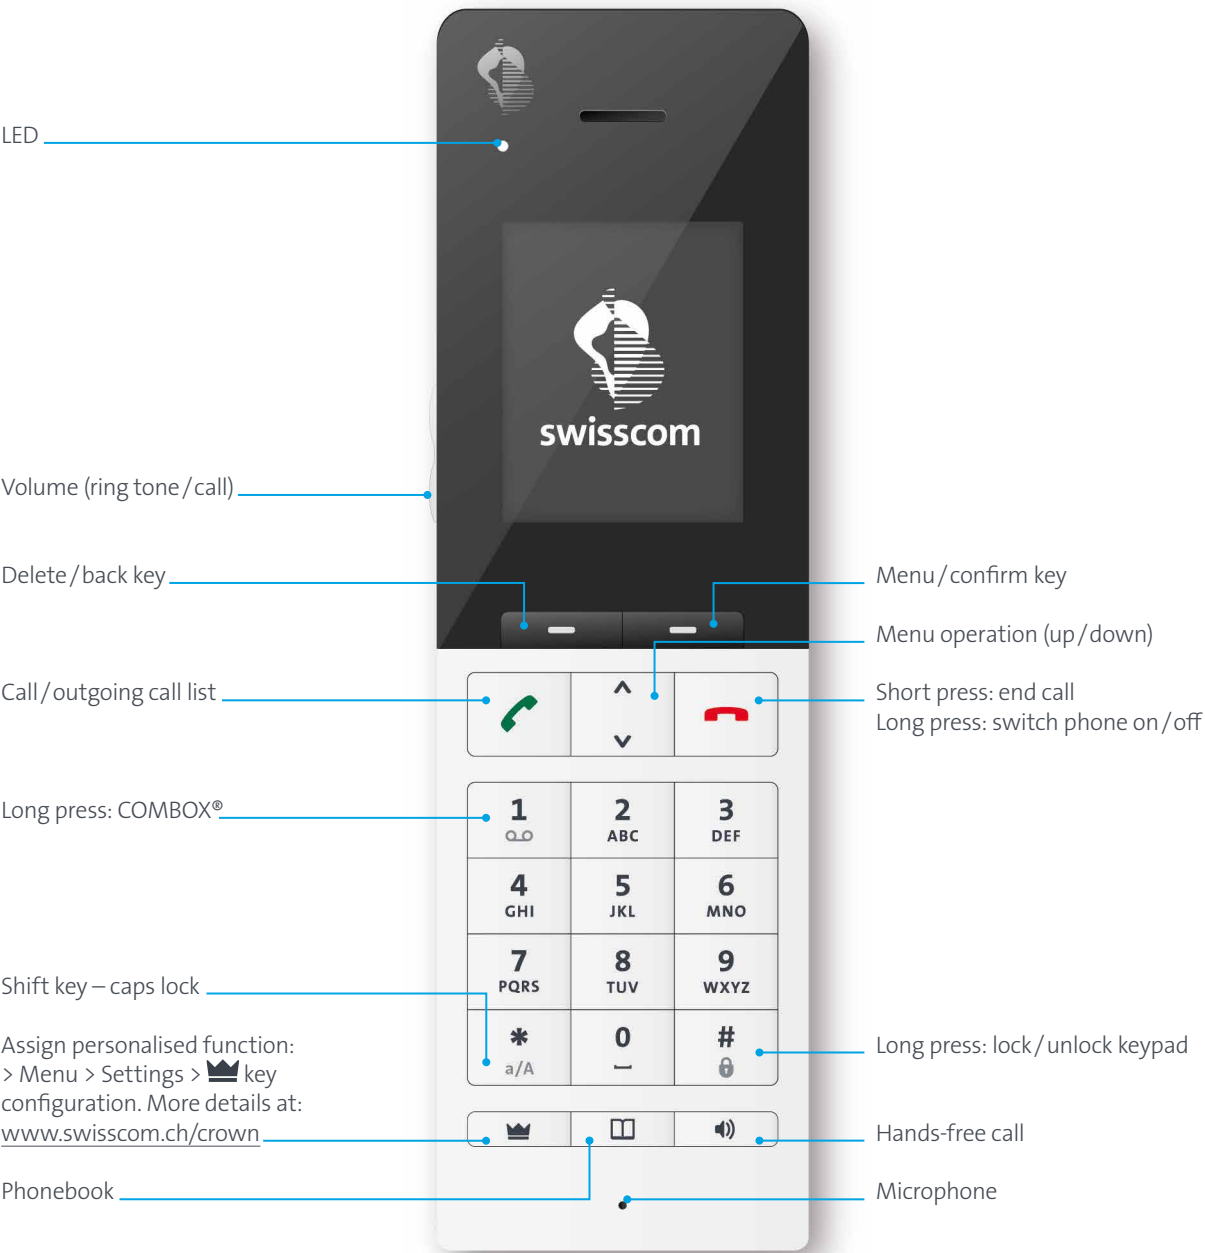

Display icons



The antenna display indicates 0 – 4 bars depending on signal strength. The antenna display flashes when the phone is out of range.
Phone not within range > Reduce the distance to your base station.



Ecomode plus
Ecomode plus is an environmentally friendly system that reduces electricity consumption and offers a variable reduction of transmission power. Transmission power is reduced by 100% as soon as Ecomode plus is activated.



Charge level display
The charge level display flashes when the battery is empty.



Handset is not registered > please register

LED behaviour



Flashing red: handset is not registered



Flashing white (fast): incoming call
Flashing white (slow): missed call

Manual connection

You can connect the HD-Phone to the Internet-Box / base station manually.
Press > Menu > Settings > Advanced settings > Connection > Connect > OK, and then press the + button on the Internet-Box.

Safety instructions

Please note

- > Protect your hearing: Ringtones and notification alerts are transmitted on the handset over the loudspeaker. Please do not hold the handset up to your ear when one of those functions is switched on – your hearing may otherwise be impaired.
- > In case of power outage, no emergency calls can be made with this handset. Please ensure that other calling options are available if needed.
- > Only use the handset in ambient temperatures from +5 to +40 degrees Celsius and protect it from direct sunlight
- > Do not use the handset/charger in potentially explosive environments (e.g. paintshops, petrol stations etc.).
- > Do not place the handset /charger in bathrooms or wet areas.
- > Use only the adapter supplied.

Impairment due to radio signals

- > The functioning of medical equipment may be impaired by the radio signals.
- > Hearing device wearers should note that when using the handset, radio signals in the hearing device might interfere and cause unpleasant buzzing sounds.

Rechargeable batteries

- > Please use only NiMH AAA rechargeable batteries.
- > Do not use any other chargers, as the rechargeable batteries may otherwise be damaged.
- > Avoid batteries coming into contact with water or fire.
- > During charging batteries may heat up. This is normal and not dangerous.



Return your device to Swisscom.



Handset and charger compliance to EU Directive 99/5/EC on radio systems and telecommunication equipment is certified by the CE symbol. The handset complies with CAT-iq Standard 2.0. The conformity declaration is available on the following website: www.swisscom.ch/hdphones-help