


vtech®

Quick Start Guide



Designed to fit your home.
And your life.

VTech Telecommunications Ltd.
A member of THE VTECH GROUP OF
COMPANIES.
Specifications are subject to change
without notice.
© 2017 for VTech Telecommunications Ltd.
All rights reserved. Version 3 08/17.



Easily transfer your
smartphone contacts to your
handset. Please refer to the
«Phonebook» section on the back
page.

You have now set up your VTech HD10.

Start

You have received:



VTech HD10
handset



Battery
compartment cover
Batteries
Charging cradle with power adapter

Installation overview


1

Your Internet-Box must be
installed and switched on.

2

Insert the batteries and close
the compartment.

3

Select your language.



1 2

4

Take your handset and go to
the place your Internet-Box is
installed.


7

Connect the adapter to the
power socket of your choice.



We recommend you to charge your handset for at least
15 hours once you have set it up.

6

Press the connection button
on your Internet-Box.



Wait for the handset to connect.

If the connection has failed, repeat steps 4–5.
You can find the registration mode of the handset under:
> OK > Settings > Advanced settings > Connection
> Connect > OK

Phonebook

Use your smartphone contacts on your VTech HD10 handset.

Transfer your smartphone contacts to the Internet-Box phonebook at the press of a button via the Swisscom Home App. You can then access the Internet-Box phonebook with your handset.



You can easily edit contacts directly on the handset or Internet-Box web portal at <http://internetbox>.

Add new contact:

> OK > Phonebook > New contact

Sort order of your contacts

You can sort your phonebook contacts by first or last name:
> OK > Settings > Advanced settings > Sort order contacts

For additional details visit
www.swisscom.ch/internetbox-phonebook

Before replacing the Internet-Box or a reset save the settings at:

Internet-Box 2/plus/standard:
<http://internetbox> > Settings > Save configurations

Internet-Box light:
<http://internetbox> > Advanced > Save current configuration

Alarm clock

Set alarm clock

> OK > Settings > Alarm clock > Set your alarm clock > Save
You can choose between «One time», «All days» or «Monday to Friday».

When the alarm sounds

Left top key : Turn off
Right top key : Snooze (alarm repetition after 5 min.)

After 10 minutes of ringing the alarm will turn off automatically.

Turn off alarm clock setting

> OK > Settings > Alarm clock > Off

Choose ringtones

> OK > Settings > Ringtones
Choose between «External calls» and «Internal calls».

Adjust ringtone volumes

During standby mode, press navigating keys **▲▼** to adjust the ringtone volume.

Comfort tones

> OK > Settings > Comfort tones
Select the desired function and press «OK» to turn the comfort tone off/on. Select «Save» to confirm the modification.

Useful information on your handset

ECO Ecomode plus

When in standby, Ecomode plus is automatically activated and reduces the transmission power by 100%.

Signal strength

The icon indicates 0 - 4 bars depending on signal strength. It flashes when the handset is out of range.
> Reduce the distance to your Internet-Box.

Not connected

Your handset is **not connected**.
> Please connect your handset (see step 5).



- The **charge level icon** flashes when the batteries are empty.
- > Place your handset back on the charging cradle.
- The alarm clock is set.
- COMBOX® messages

Auto talk

In order to accept a call you can simply pick up your handset resting in its charging cradle without having to press the green call button. Activate Auto talk if you would like to use this function:

> OK > Settings > Advanced settings > Auto talk > Turn on

Short dialling (numbers 0 to 9)

You can assign keys (0 - 9) for the phone numbers that are important to you.

Set up short dialling

> Quickdial > Select number > Options > Enter destination
> OK

To call the saved number,

press the key assigned to the phone number for a long time.

You can assign the number of another internal handset, a contact out of your phonebook or you can manually type in the number desired.

Clock display

If your clock function is activated your handset will display time and date when resting on the charging cradle.

You can turn off this function:

> OK > Settings > Advanced settings > Clock display

> Turn off

Brightness of the clock display

> OK > Settings > Advanced settings > Clock display
You can choose between «Bright», «Medium» and «Dark».

Change handset name

> OK > Settings > Advanced settings > Handset name
Enter the name of your choice, for example «living room».

Factory reset

> OK > Settings > Advanced settings > Factory reset > OK
> OK

All settings will be cancelled and your handset disconnected. However this will not concern your phonebook nor your call records.

Tips on making calls

Missed calls

> OK > Missed calls:
 missed calls
Use «Options» to call back, save the number in your phonebook or delete this call.

Call records

> OK > Call records:
 call made
 accepted call
 missed call

Search for a contact in your phonebook

> OK > Phonebook > Search contact > OK
You can type in one or more letters.

Short search:

> OK > Phonebook > Type in one letter.

Setting up your COMBOX®

> OK > COMBOX messages
Please add your phone number to the COMBOX® number 086 with your phone number (enter without blanks).

Forward external calls in-house

> Options > Transfer > OK > Choose another handset (for example DECT204) > OK > Internal connection to DECT204 is now active > Options > Transfer > OK

Call management

Call barring (the last caller will be blocked/barred):
> OK > Settings > Call management > Call barring*

Do not disturb (all callers will hear a busy tone):
> OK > Settings > Call management > Do not disturb*

Block anonymous (Anonymous callers will hear a standard announcement):
> OK > Settings > Call management > Block anonymous*

Call forwarding:
> OK > Settings > Call management > Call forwarding

Call anonymously (your number will not be displayed):
> OK > Settings > Call management > Call anonymously

Safety instructions

Please note

> Protect your hearing: Ringtones and notification alerts are transmitted on the handset over the loudspeaker. Please do not hold the handset up to your ear when one of those functions is switched on – your hearing may otherwise be impaired.
> In case of power outage, no emergency calls can be made with this handset. Please ensure that other calling options are available if needed.
> Only use the handset in ambient temperatures from +5 to +40 degrees Celsius and protect it from direct sunlight.
> Do not use the handset/charger in potentially explosive environments (e.g. paintshops, petrol stations etc.).
> Do not place the handset / charger in bathrooms or wet areas.
> Only use the following adapter model: VT04EEU06045, VTECH TELECOMMUNICATIONS LTD. or RJ-AS060450E004, RISHENZHENG, RUIJING INDUSTRIALCO.LTD. For pluggable equipment, the socket-outlet (power adaptor) shall be installed near the equipment and shall be easily accessible.

Impairment due to radio signals

> The functioning of medical equipment may be impaired by the radio signals.
> Hearing device wearers should note that when using the handset, radio signals in the hearing device might interfere and cause unpleasant buzzing sounds.

Rechargeable batteries

> Please only use NiMH, AAA, 1.2V, 850mAh batteries (Manufacturer: GPI INTERNATIONAL).
> Do not use any other chargers, as the rechargeable batteries may otherwise be damaged.
> Avoid batteries coming into contact with water or fire.
> During charging batteries may heat up. This is normal and not dangerous.
> CAUTION: risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Return your device to Swisscom.

Handset and charger compliance to EU Directive 2014/53/EU on radio systems and telecommunication equipment is certified by the CE symbol. The handset complies with CAT-iq Standard 2.0. The conformity declaration is available on the following website: www.swisscom.ch/hd-phones-help

