Offline firmware/dashboard update of Huawei hotspots for models

- **E5776s-32**

- **E5786s-32a**

- **E5786Bs-32a**

Caution: please note that a local firmware update for the hotspot always requires that the laptop be connected with a USB cable.
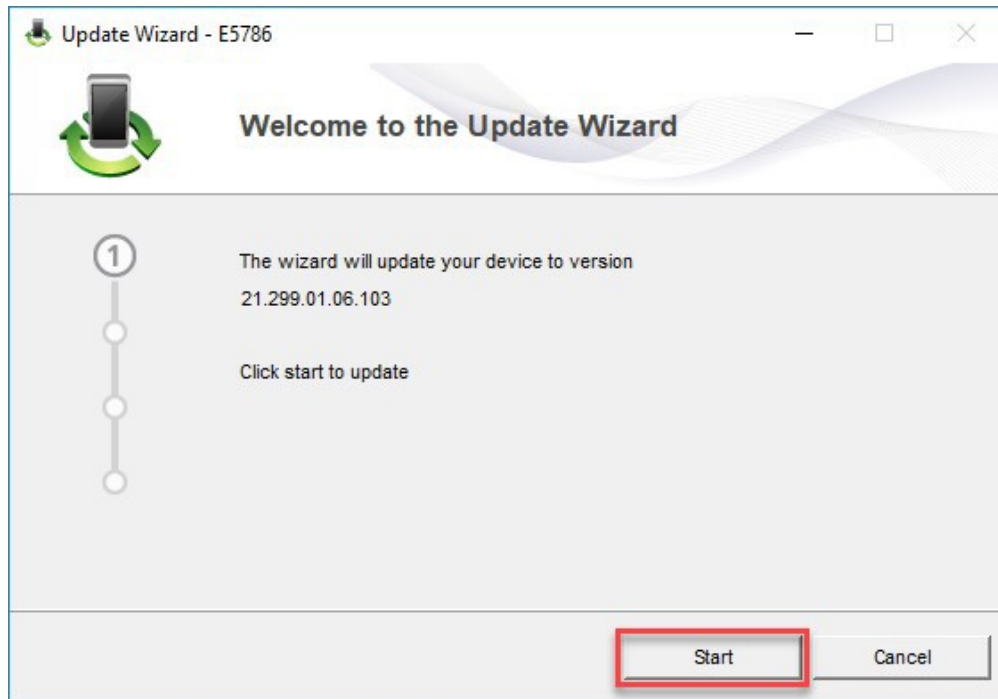
First check whether the hotspot can be updated online. (via WebGUI (http://192.168.8.1) on the 'Update' tab)

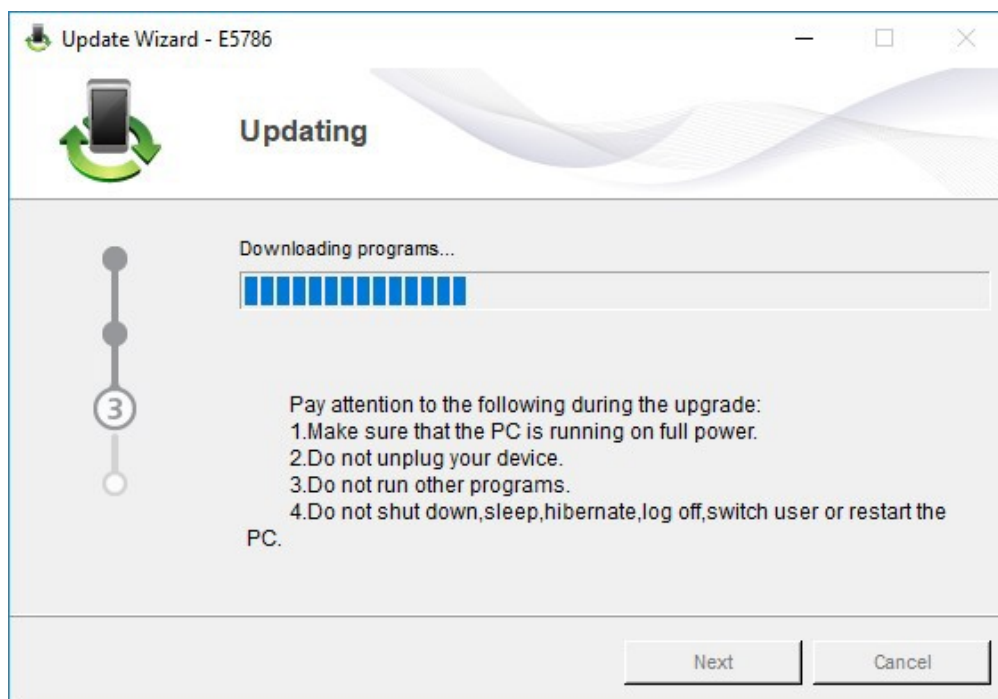# Instructions for firmware/dashboard update in Windows

1. Connect the hotspot via the USB cable supplied with your Windows laptop.
2. Double-click on the file for the appropriate laptop model to launch the update wizard:

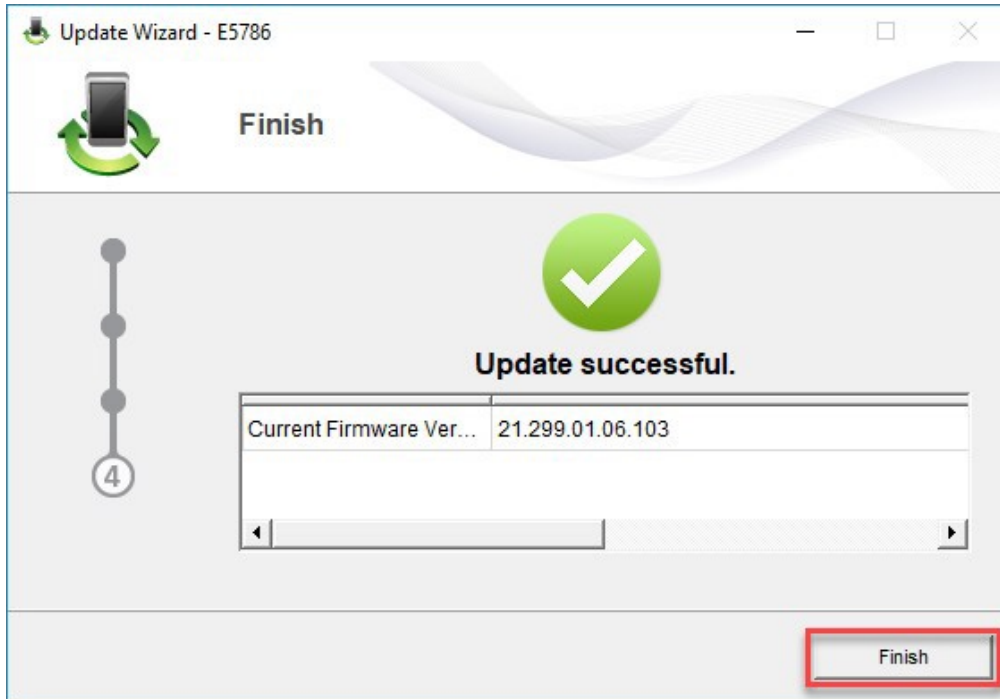| Model	Firmware	Dashboard
E5776s-32	E5776_Update_22.265.09.07.103.exe	Update_UTPS1.12.00.103_MAC1.12.00.103.exe
E5786s-32a	E5786_Update_21.299.01.06.103.exe	Update_WEBUI_17.100.07.02.103.exe
E5786Bs-32a	E5786_Update_21.313.17.03.103.exe	Update_WEBUI_17.100.14.01.103_NE5.exe

3. Click the '**Start**' button to begin updating the firmware.
   (While the screenshots show the model E5786s, the update process is the same for all models)

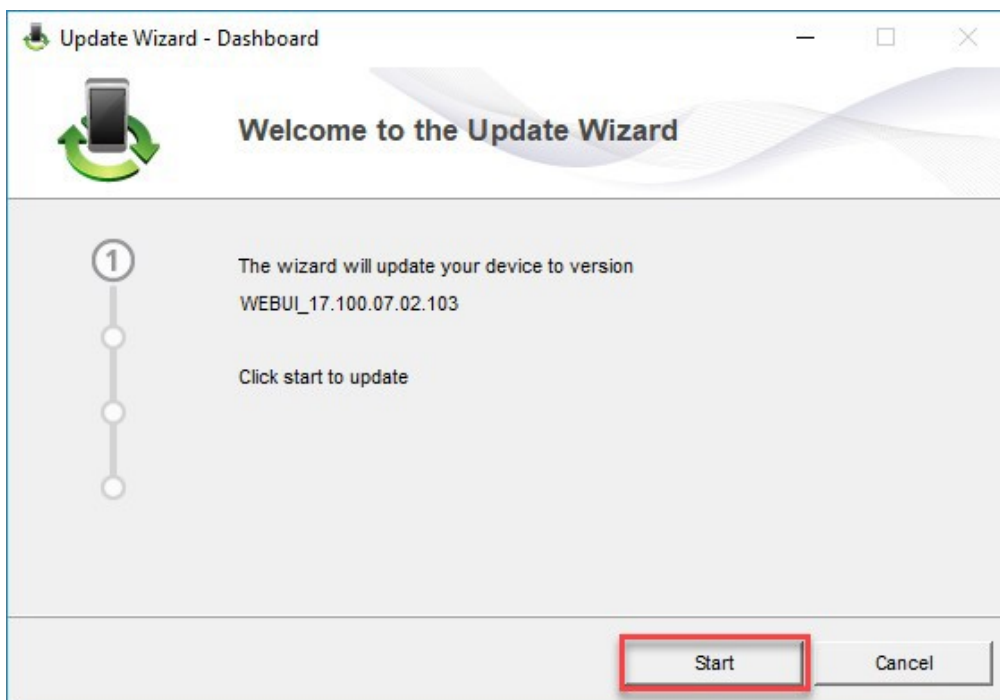4. The new firmware will now be updated.

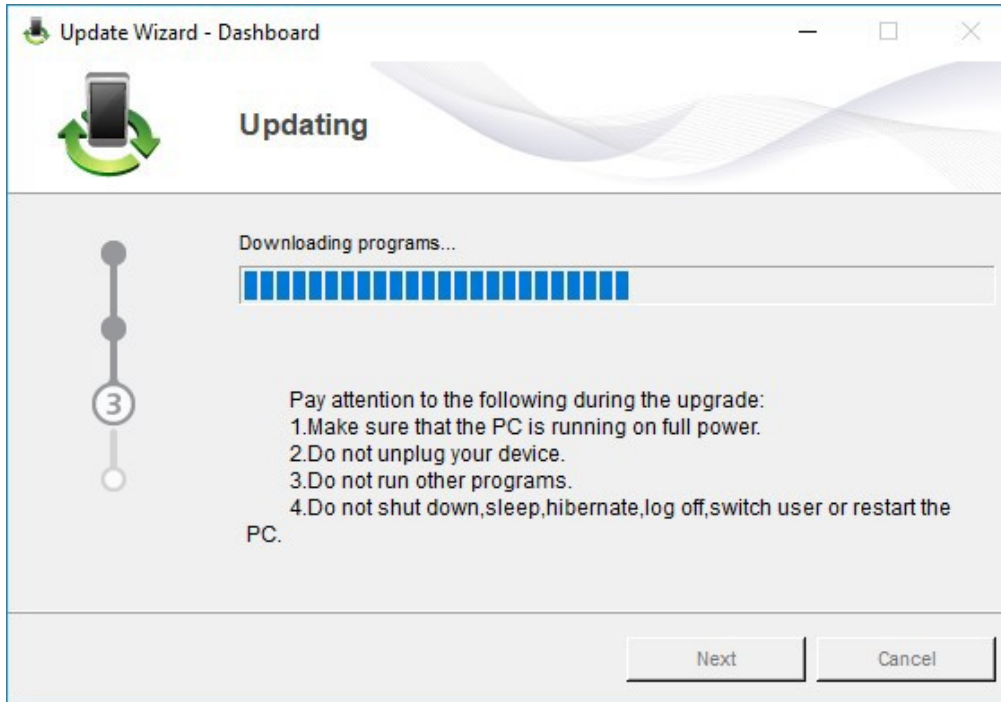5. Close the firmware update wizard by clicking on '**Finish**'.

6. Wait until the hotspot restarts.
7. Double-click on the file for the appropriate laptop model to start the dashboard update wizard:

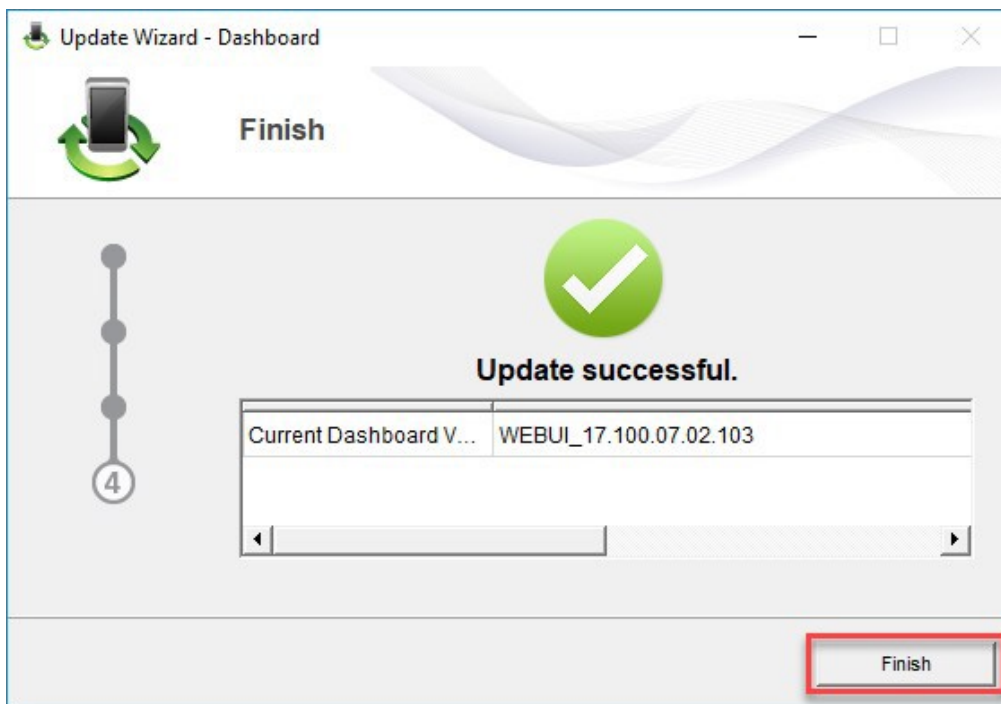| Model	Firmware	Dashboard
E5776s-32	E5776_Update_22.265.09.07.103.exe	**Update_UTPS1.12.00.103_MAC1.12.00.103.exe**
E5786s-32a	E5786_Update_21.299.01.06.103.exe	**Update_WEBUI_17.100.07.02.103.exe**
E5786Bs-32a	E5786_Update_21.313.17.03.103.exe	**Update_WEBUI_17.100.14.01.103_NE5.exe**

8. Click on the '**Start**' button to begin updating the dashboard.
   (While the screenshots show the model E5786s, the update process is the same for all models)

9. The dashboard will now be updated.

10. Close the dashboard update wizard by clicking on '**Finish**'.

11. You can now use the hotspot with the latest features and security update as normal.