

Internet-Box copper kit (IP) setup

Convert your existing Internet-Box to a fixed network connection (IP)



www.swisscom.ch/internetbox-help

Swisscom (Switzerland) Ltd
Contact Center
CH-3050 Bern

www.swisscom.ch
0800 800 800

Start

If your router looks like this, follow the instructions on the reverse.




Internet-Box standard

Continue you with step 1 if your router is the same as the one on the installation overview.

1

The package includes:

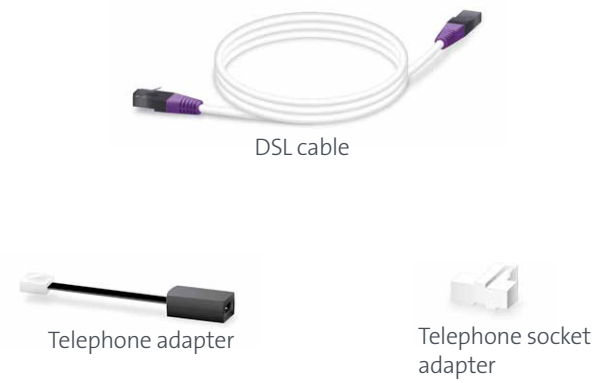

Follow the steps below to convert your existing Internet-Box to a fixed network connection (IP). This is the requirement for using the subscription you have selected.

2

Switch off the Internet-Box.



3

Remove your old Internet / telephony installations (if any).




You can return old devices to Swisscom for **recycling** free of charge. A return label is included on the delivery slip.

4

Connect the new DSL cable to the white adapter.

a) TT83 telephone socket

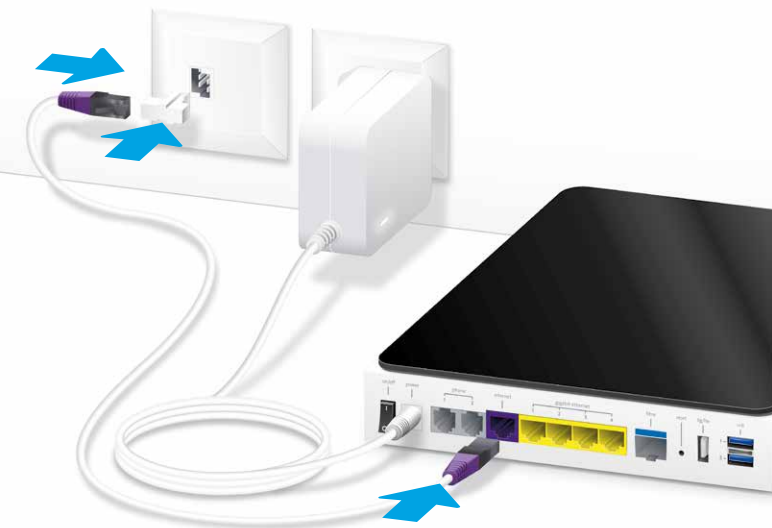


DSL cable variations:

b) RJ45 telephone socket

c) Four-pin socket

d) Digital socket

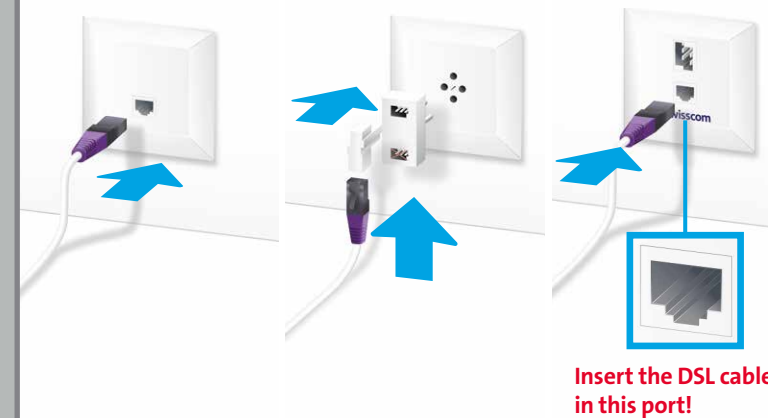

Insert the DSL cable in this port!

9

Your fixed network connection (IP) is up and running.

Optionally:
Wireless HD-Phone connections

You can connect the HD-Phones from Swisscom wirelessly with the Internet-Box. For information about HD-Phones from Swisscom please visit www.swisscom.ch/hdphones




- > Internet-Box: press + button
- > Start your HD-Phone and select connection mode

8

N.B. Please note that conventional DECT cordless phones cannot be wirelessly connected to the DECT base station integrated into the Internet-Box, but must be directly inserted into the «phone 1» or «phone 2» ports.

Connect your telephone to the Internet-Box.

7

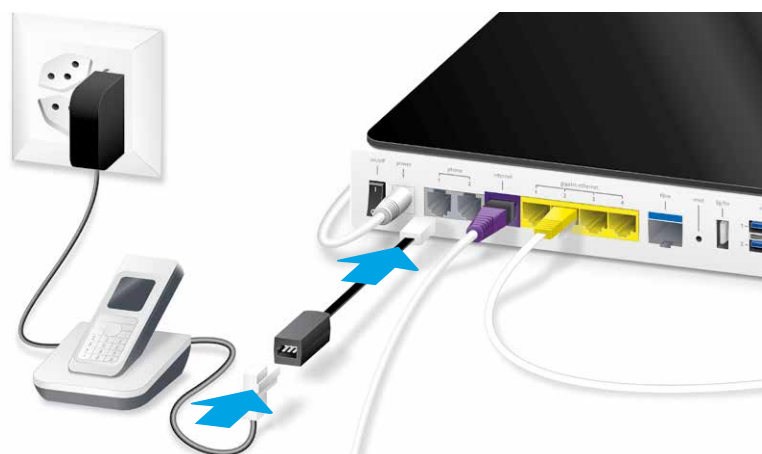

Now only connect your telephone and / or fax machine to the **Internet-Box** (phone 1 and 2) – and not the telephone socket as before. Use the black telephone adapter if necessary.
Exception: You can only connect your telephone and fax devices to all the telephone sockets in your building once you have installed a digital socket (see Step 4).

Connect your computer and open your Internet browser.




6



Connect the computer per Ethernet cable or to your existing WLAN. Open www.bluewin.ch in the Internet browser and, if the registration page is displayed, complete all compulsory fields step by step. If the page is not displayed, continue with step 7.

5

Switch on the Internet-Box and wait 5 minutes.

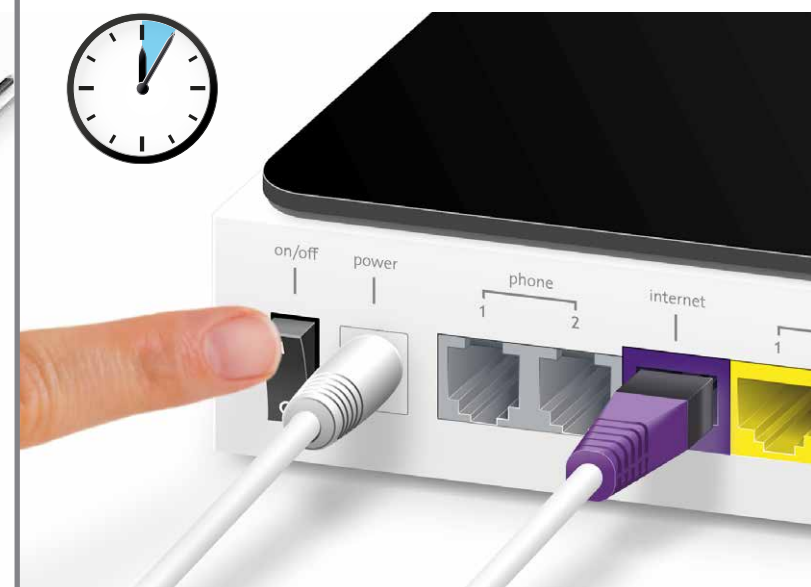

After 5 minutes continue with step 6.

Internet-Box copper kit (IP) setup

Convert your existing Internet-Box to a fixed network connection (IP)



www.swisscom.ch/internetbox-help

Swisscom (Switzerland) Ltd
Contact Center
CH-3050 Bern

www.swisscom.ch
0800 800 800

KKD+JM (RES-CWE-LID) 10203080 06/2015 EN

Start


If your router looks like this, follow the instructions on the reverse.



Continue you with step 1 if your router is the same as the one on the installation overview.

1

The package includes:

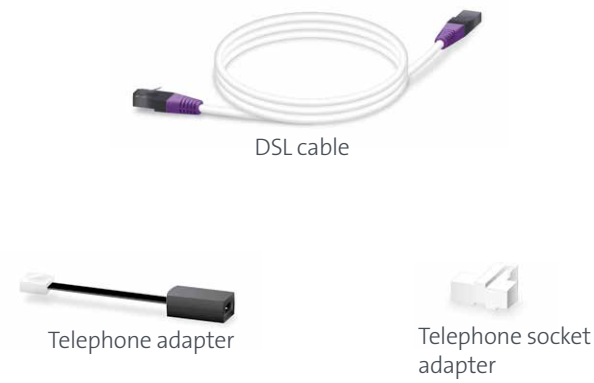

Follow the steps below to convert your existing Internet-Box to a fixed network connection (IP). This is the requirement for using the subscription you have selected.

2

Switch off the Internet-Box.



3


Remove your old Internet / telephony installations (if any).




You can return old devices to Swisscom for **recycling** free of charge. A return label is included on the delivery slip.

4

Connect the new DSL cable to the white adapter.

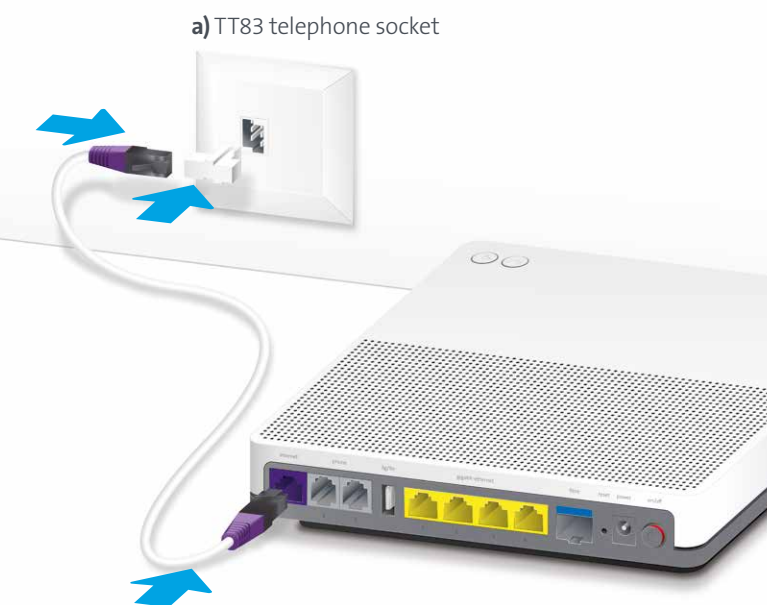

a) TT83 telephone socket

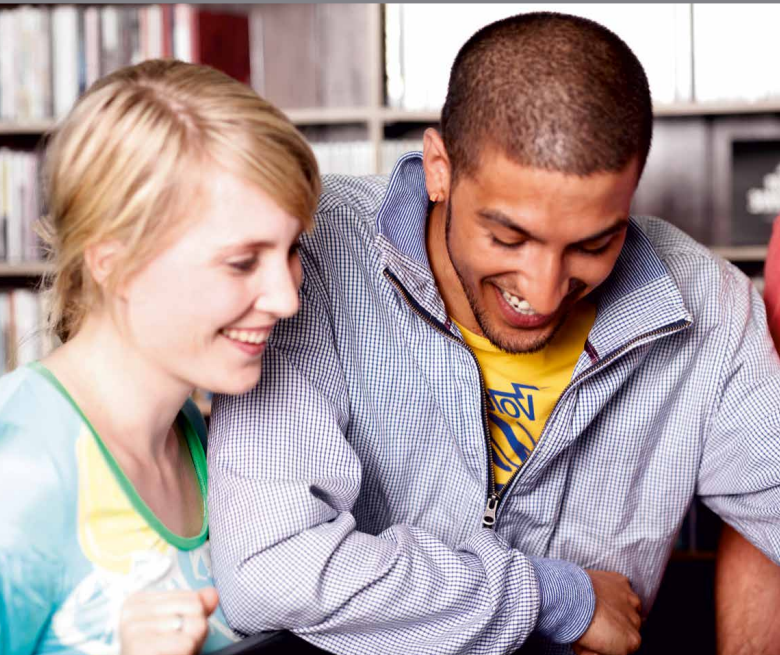

9

Your fixed network connection (IP) is up and running.

Optionally: Wireless HD-Phone connections

You can connect the HD-Phones from Swisscom wirelessly with the Internet-Box. For information about HD-Phones from Swisscom please visit www.swisscom.ch/hdphones



HD-Phone

- > Internet-Box: press + button
- > Start your HD-Phone and select connection mode

8

N.B. Please note that conventional DECT cordless phones cannot be wirelessly connected to the DECT base station integrated into the Internet-Box, but must be directly inserted into the «phone 1» or «phone 2» ports.

Installation overview

(Now just only connect phones to the Internet-Box!)




DSL cable variations:

b) RJ45 telephone socket

c) Four-pin socket


d) Digital socket

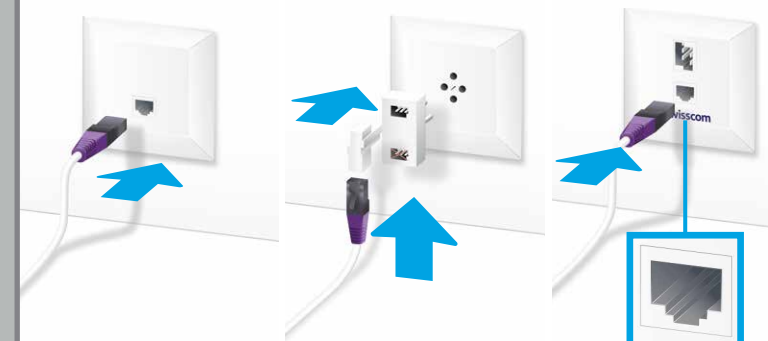

Insert the DSL cable in this port!

Connect your telephone to the Internet-Box.

7

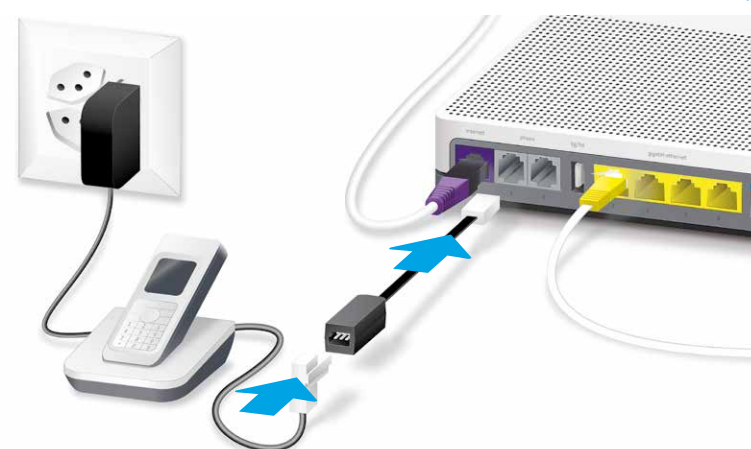


Now only connect your telephone and / or fax machine **to the Internet-Box** (phone 1 and 2) – and not the telephone socket as before. Use the black telephone adapter if necessary.
Exception: You can only connect your telephone and fax devices to all the telephone sockets in your building once you have installed a digital socket (see Step 4).

Connect your computer and open your Internet browser.



6

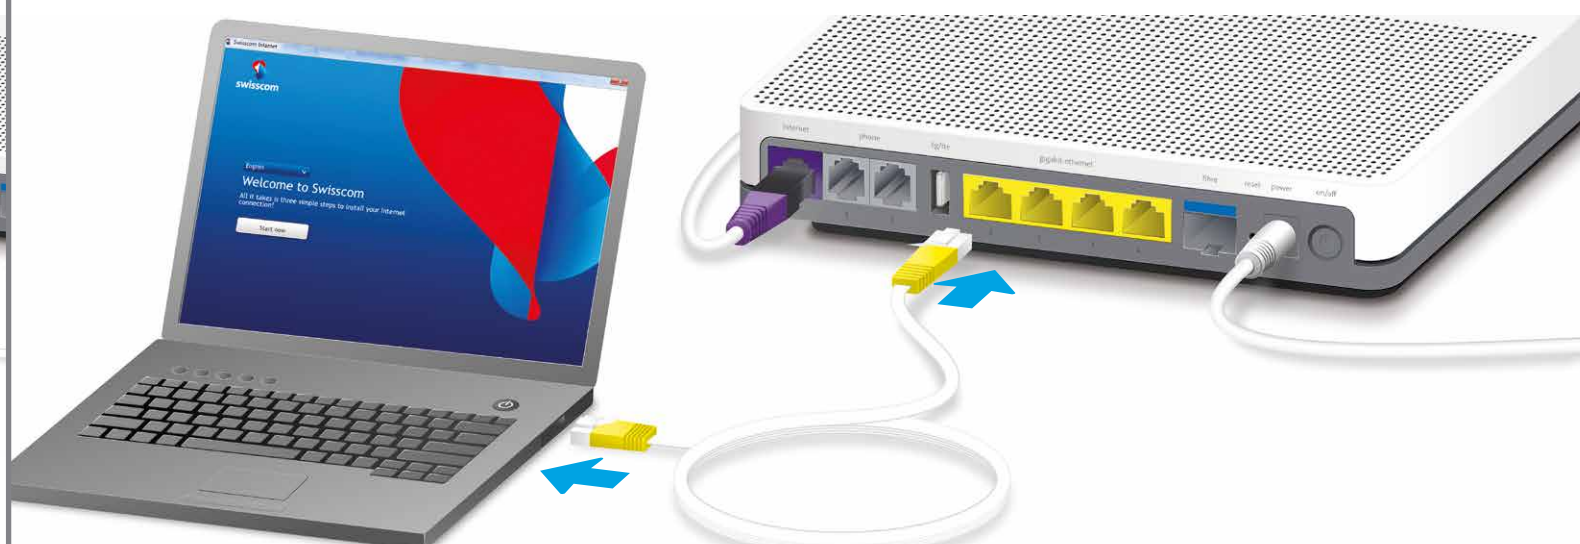

Connect the computer per Ethernet cable or to your existing WLAN. Open www.bluewin.ch in the Internet browser and, if the registration page is displayed, complete all compulsory fields step by step. If the page is not displayed, continue with step 7.

5

Switch on the Internet-Box and wait 5 minutes.



After 5 minutes continue with step 6.