


Make calls in HD sound quality



Start You have received:



1 You have one of these Internet-Boxes:

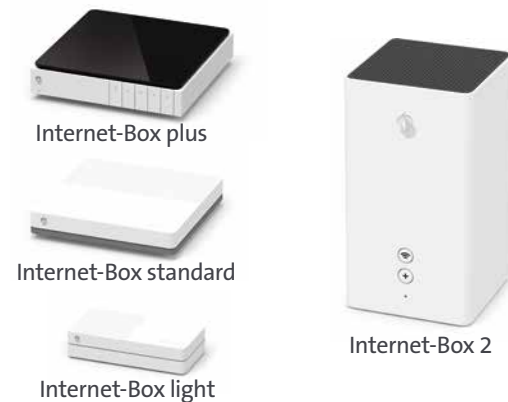

Your Internet-Box must be installed and switched on.

2 Pull the red tab out from the phone.




You do not have to remove the battery compartment cover.

Installation overview



3 Select your language.

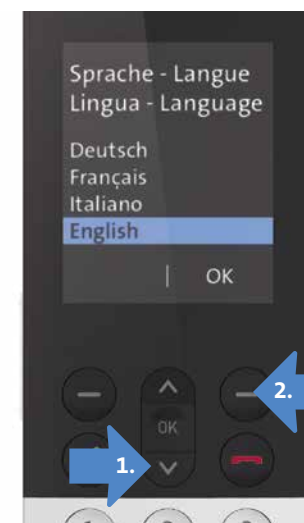

4 Take your HD-Phone and go to the place your Internet-Box is installed.



5 Press the + button on your Internet-Box.



Wait for the HD-Phone to connect.
If connecting your Internet-Box didn't work, repeat steps 4–5.

7 Easily transfer your smartphone contacts to your HD-Phone. Please refer to the **«Phonebook»** section on the backside.



You have now set up your HD-Phone Davos.

6 Connect the adapter to the power socket of your choice or directly over the USB connection on your Internet-Box.



We recommend you to charge your phone for at least 15 hours once you have set it up.

