

Gigaset



Information on the phone system:

- Detailed and up-to-date operating guide for your Gigaset phone
www.gigaset.com/manuals
- Documentation relating to your base/router





Gigaset HX – the universal handset

With your Gigaset HX handset, you have purchased a high-quality, multifunctional and future-proof device.

You can use your handset with several different DECT bases.

On a Gigaset base

Connect your HX handset to a Gigaset base and use the many features with the quality you would expect from Gigaset.

If your Gigaset base is IP-compatible, you can also make broadband calls using your HX handset with the highest voice quality (HDSP).

In this guide, all functions that are available for your HX handset are detailed/described. The complete functionality with Gigaset bases is described in the guide relevant to your Gigaset system.

All Gigaset user guides can be found at ➔ www.gigaset.com/manuals

On a DECT/GAP telephone or router from another manufacturer

The handset also functions with DECT/GAP telephones from other manufacturers, of course, as well as DECT routers. Additional information can be found at

➔ www.gigaset.com/compatibility.

On DECT routers with CAT-iq 2.0/2.1

Your Gigaset HX handset is certified in accordance with the DECT/CAT-iq 2.0/2.1 standard. As a result, operation with a DECT router with CAT-iq functionality is possible.

Handset functions on a CAT-iq router (amongst others):

- full access to the central directory on the router as well as the local directory integrated in the handset,
- convenient calling and using of call lists,
- using several lines and call numbers (the relevant scope of the function is dependent on the country, network and router),
- enjoy excellent audio quality (certified HD-Voice™ quality).

➔ Details can be found in the relevant user guide for your router.

Additional information regarding your HX handset can be found at ➔ www.gigaset.com/hx

Details regarding the functionality of the handset on various bases and routers can be found at

➔ www.gigaset.com/compatibility

Contents

Overview	4
Safety precautions	6
Getting started	7
Using the telephone	12
Getting to know your telephone	12
Making calls	16
Local answer machine	19
Call lists	20
Message lists	21
Directories	23
Local handset directory	23
Base directory	27
Assignment of the control key to a directory	27
Additional functions	28
Calendar	29
Timer	31
Alarm clock	31
Baby monitor	32
ECO DECT	34
Protection against unwanted calls	35
Setting the handset	39
Appendix	50
Service (Customer Care)	50
Manufacturer's advice	52
Technical data	54
Display icons	56
Index	58
Open Source Software	62



Not all functions described in the user guide are available in all countries or from all network providers.

Overview

1 Display

2 Status bar (→ p. 56)

Icons display current settings and operating status of the telephone

3 Display keys (→ p. 13)

Various functions, depending on the operating situation

Changing key assignments (→ p. 45)

4 End call key / On/off key

End call; Cancel function; one level back

Back to idle mode; Switch the handset on/off

5 Control key / Menu key (→ p. 13)

Open a menu; navigate in menus and entry fields; access functions

6 Hash key / Lock key

Lock/unlock the keypad; enter a dialling pause

Toggle between upper/lower case and digits

7 Recall key

Consultation call (flash)

▶ Press and hold

▶ Press briefly

▶ Press briefly

▶ Press briefly

8 Microphone

9 Star key

Switch the ringtone on/off

▶ Press and hold

▶ Press briefly

▶ Press briefly

10 Headset connector (3.5 mm jack)

11 Key 1

Select answer machine/network mailbox

▶ Press and hold

▶ Press briefly

12 Talk key / Handsfree key

Accept call; dial number displayed; switch between earpiece mode and handsfree mode; open the redial list

Start dialling

▶ Press and hold

▶ Press briefly

▶ Press briefly

13 Message key (→ p. 21)

Access to the call and message lists;

Flashes: new message or new call



If multiple functions are listed, the button function depends on the situation.

Subject to technical and visual modifications as part of the product improvement process.

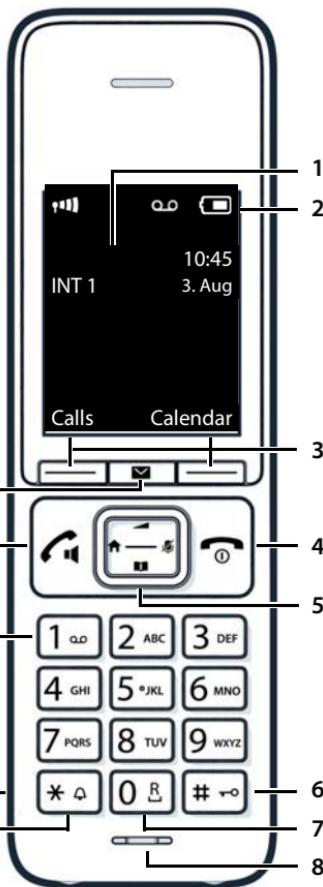


Illustration in the user guide

	Warnings, which if not heeded, can result in injury to persons or damage to devices.
	Important information regarding function and appropriate handling or functions that could generate costs.
	Prerequisite for being able to carry out the following action.
	Additional helpful information.

Keys

	Talk key		Handsfree key
	End call key		Number / letter keys
	Control key rim / centre		Message key
	Recall key		Star key
	Hash key		
OK, Back, Select, Change, Save, ...		Display keys	

Procedures

Example: Switching Auto answer on/off

► ► ► ► Auto Answer ► Change (= activated)

Symbols	Meaning
►	Every arrow initiates an action.
►	When in idle status press the centre of the control key. The main menu opens.
►	Navigate to the icon using the control key . Select OK to confirm. The submenu Settings opens.
►	Select the Telephone entry using the control key . Select OK to confirm. The submenu Telephone opens.
► Auto Answer	The function to switch Auto answer on/off appears as the first menu item.
► Change	Select Change to activate or deactivate. Function is activated <input checked="" type="checkbox"/> / deactivated <input type="checkbox"/> .

Safety precautions



Read the safety precautions and the user guide before use.



The device cannot be used in the event of a power failure. In case of a power failure it is also **not** possible to make **emergency calls**.

If the LAN or Internet connection is down, functions that require an Internet connection are not available, such as Internet telephony (VoIP), online directories and the Info Center.

Emergency numbers **cannot** be dialled if the **keypad/display lock** is activated!

Use only **rechargeable batteries** that correspond to the **specification** (see list of permitted batteries → www.gigaset.com/service). Never use a conventional (non-rechargeable) battery or other battery types as this could result in significant health risks and personal injury. Rechargeable batteries, which are noticeably damaged, must be replaced.



The handset must not be operated if the battery cover is open.

Ensure that the batteries can not be short-circuited by objects in the battery compartment.



Do not use the devices in environments with a potential explosion hazard (e.g. paint shops).



The devices are not splashproof. For this reason do not install them in a damp environment such as bathrooms or shower rooms.



Use only the power adapter indicated on the device.

Whilst charging, the power socket must be easily accessible.



Remove faulty devices from use or have them repaired by our Service team, as these could interfere with other wireless services.



Do not use the device if the display is cracked or broken. Broken glass or plastic can cause injury to hands and face. Send the device to our Service department to be repaired.



Do not hold the rear of the handset to your ear when it is ringing or when speaker mode is activated. Otherwise you risk serious and permanent damage to your hearing.

The phone may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.



Keep small cells and batteries, which can be swallowed, out of the reach of children.

Swallowing a battery can lead to burns, perforation of soft tissue and death. Severe burns can occur within 2 hours of swallowing.

In the case of a swallowed cell or battery, seek medical care immediately.



Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery. If you use a medical device (e.g. a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy (for the specifications of your Gigaset product see "Technical data").

Getting started

Contents of the package

- One handset, one battery cover, two batteries, one charging cradle with power adapter, one belt clip
- 1 x user guide



The charging cradle is designed for use in closed, dry rooms within a temperature range of +5°C to +45°C.

Never expose the telephone to heat sources, direct sunlight or other electrical devices.

Protect your telephone from moisture, dust, corrosive liquids and vapours.


The device's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on furniture, contact marks on the surfaces cannot be completely ruled out.

Connecting the charging cradle

- ▶ Connect the flat plug of the power adapter **1**.
- ▶ Plug the mains unit into your power socket **2**.

To remove the plug from the charging cradle again:

- ▶ Disconnect the power adapter from the mains power supply.
- ▶ Press the release button **3**.
- ▶ Remove the flat plug **4**.

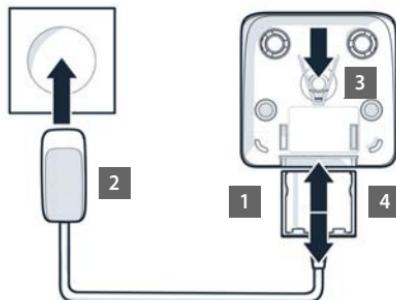


Setting up the handset for use

The display is protected by a plastic film. ▶ Please remove the protective film!

Inserting the batteries



Only use **rechargeable batteries** since otherwise major health risks and injury may result. For example, the outer casing of the batteries could be destroyed or the batteries could explode. The device could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

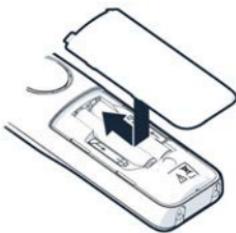


- ▶ Insert the batteries (for correct +/- direction, see diagram).
- ▶ Fit the battery cover from the top.
- ▶ Press the cover until it clicks into place.
- ▶ To re-open the battery cover:
 - ▶ Insert a fingernail behind the notch at the top of the cover and slide it downwards.

Attaching the belt clip

The handset has notches on each side for attaching the belt clip.

- Attaching the belt clip: ▶ Press the belt clip onto the back of the handset so that the tabs on the belt clip click into place in the notches.
- Removing the belt clip: ▶ Press the centre of the belt clip firmly with your right thumb. ▶ Push the nail of your left thumb up between the clip and the casing. ▶ Slide the clip upwards to remove.

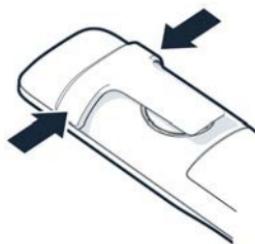

Charging the batteries

- ▶ Charge the batteries fully prior to first use in the charging cradle.

The batteries are fully charged when the power icon  disappears from the display.



Batteries may heat up during charging. This is not dangerous.

After a time, the charge capacity of the battery will decrease for technical reasons.

Switch the handset off if you are not using it for a couple of days.

If you are not using the handset for a couple of weeks, switch it off and remove the batteries.

Changing the display language

You can change the display language if the phone is set to a language not required.

- ▶ Press the centre of the control key .
- ▶ Press the keys **[6]** and **[5]** **slowly** and successively . . . the language settings display appears, the set language (e. g. **English**) is highlighted ( = selected).
- ▶ To select a different language: ▶ Press the control key  until the desired language is highlighted on the display, e. g. **Francais** ▶ press the key on the right directly underneath the display to activate the language.
- ▶ To revert to idle status: ▶ Press and **hold** the End call key .

Example

Deutsch	
English	
Francais	

Registering the handset (depending on the base)



Registration must be initiated on the base station **and** on the handset.

Both must be carried out **within 60 secs.**

On the base / On the router

Gigaset base: ▶ Press and **hold** the Registration/Paging key on the base station (approx. 3 sec.).

Other base station/router:

- ▶ Information regarding the registration procedure
- ▶ Documentation regarding your base/your router

On the handset

▶ ▶ **Settings** ▶ **OK** ▶ **Registration** ▶ **OK** ▶ **Register Handset** ▶ **OK** ... an available base is sought ▶ if required: enter system PIN (default setting on Gigaset bases: **0000**) ▶ **OK**

Once registration is complete, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**. If not, repeat the procedure.

A handset can be registered to up to four base stations.

▶ ▶ **Settings** ▶ **OK** ▶ **Registration** ▶ **OK**

Change of base: ▶ **Select Base** ▶ **OK** ▶ use to select base or **Best Base** ▶ **Select** (= selected)

Best Base: The handset chooses the base station with the best reception as soon as it loses connection to the current base station.

De-registering the handset (depending on the base):

▶ **De-register Handset** ▶ **OK** ... the handset being used is selected ▶ use to select another handset if required ▶ **OK** ▶ enter system PIN if required ▶ **OK** ▶ Confirm de-registration with **Yes**

If the handset is still registered to other bases, it switches to the base with the best reception (**Best Base**).

Data protection

If the product is connected to the Internet via an IP base station or router, it will automatically connect to the Gigaset support server sending regular product specific information. This information will for example be used for firmware updates or to provide internet services.

For more information regarding the stored data, please visit → www.gigaset.com

Setting the date and time

Set the date/time so that the correct date and time can be assigned to incoming calls and to enable the alarm to be used.



Date and time are set using the base. The date and time can also be set on an IP-compatible base via a time server on the network.

If the base permits it, you can set the date and time manually using the handset.

- ▶ Press the display key **Set Time**

or, if the date and time have already been set:

- ▶ ▶ **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK**



The active input position flashes.

Change input position: ▶

To switch between the entry fields: ▶

Enter date:

- ▶ enter the day, month and year in 8-digit format.

Enter time:


- ▶ enter hours and minutes in 4-digit format.

Save settings:

- ▶ Press the display key **Save**. ...**Saved** is shown in the display and a confirmation tone sounds.

Return to idle status:

- ▶ Press and **hold** the End call key

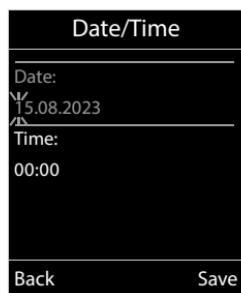


The telephone is now ready for use.

Connecting the headset

- ▶ Use the 3.5 mm jack to connect the headset to the left-hand side of the handset **1**.

The headset volume corresponds to the setting for the receiver volume.

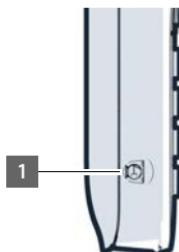

Using the telephone

Getting to know your telephone

Switch the handset on/off

Switching on: ► When the handset is switched off, press and **hold** the End call key 

Switch off: ► When the handset is in idle status, press and **hold** the End call key 

If you place a deactivated handset into the charging cradle, it will automatically activate itself.

Lock/unlock the keypad

The keypad lock prevents any accidental use of the telephone.

Lock/unlock the keypad: ►  Press and **hold**

Keypad lock activated: the following symbol appears 

 If a call is indicated on the handset, the keypad automatically unlocks and you can accept the call. It then locks again when the call is finished.

It is not possible to call emergency numbers either when keypad lock is activated.

Control key



The control key enables you to navigate the menus and input fields, and also to call up certain functions depending on the situation.

In the description below, the side of the control key (up, down, right, left) that you have to press in the different operating situations is marked in black, e. g. for "press right on the control key" or for "press the centre of the control key".

In idle status

Open the directory



Open the list of available online directories (Gigaset-IP base) or central directory of the base (e.g. CAT-iq base)



Open the main menu



Open the list of handsets



In submenus, selection and entry fields

Confirm a function




During a conversation

Open the directory



Open the list of available online directories (Gigaset-IP base) or central directory of the base (e.g. CAT-iq base)

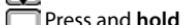

Mute the microphone



Initiate an internal consultation call




Adjust the loudspeaker volume for receiver and handsfree mode



Display keys

The display keys perform a range of functions depending on the operating situation.

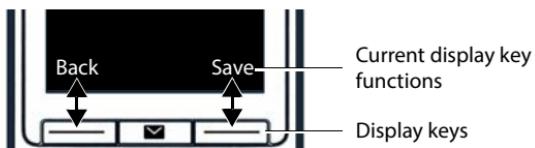

Display key icons → p. 56

When the phone is in idle, the display keys have pre-set functions, but they can be reassigned.

Menu guidance

The functions of your telephone are displayed in a menu that consists of several levels.

 The menu guidance depends on the base. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.

Examples: **Audio Settings** may be in the top-level menu or in the **Settings** submenu, while **Calendar** may be in the **Organizer** menu or the **Additional Features** menu.


Selecting/confirming functions

Confirm selection using	OK or press the centre of the control key 
One menu level back using	Back
Change to idle status	 Press and hold
Switch function on/off using	Change enabled <input checked="" type="checkbox"/> / disabled <input type="checkbox"/>
Activate/deactivate option using	Select activated  / not activated 

Main menu

In idle status: ► Press the **centre** of the control key  ►  select a submenu ► OK

Example

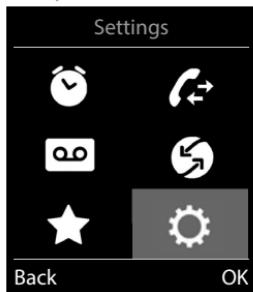


The main menu functions are shown in the display as icons. The icon for the selected function is highlighted in colour and the name of the associated function appears in the display header.

Submenus

The functions in the submenus are displayed as lists.

To access a function: ►  select a function ► OK

Example

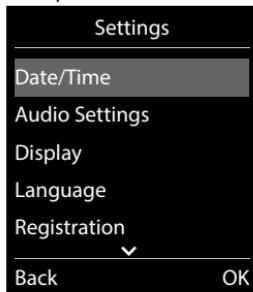

Return to the previous menu level:

► Press the display key **Back**

or

► Press the End call key  briefly

Returning to idle status

► Press and **hold** the End call key 



If a key is not pressed, after 2 minutes the display will **automatically** change to idle status.

Entering text

Input position

- ▶  select an entry field. A field is activated when the cursor is blinking inside it.
- ▶  move the position of the cursor.

Correcting incorrect entries

Delete **characters** to the left of the cursor: ▶  Press **briefly**

Delete **words** to the left of the cursor: ▶  Press and **hold**

Entering letters/characters

Multiple letters and numbers are assigned to each key between **2** and **9** and the **0** key. As soon as a key is pressed, the possible characters are displayed at the bottom of the display. The selected character is highlighted.

- Selecting letters/numbers: ▶ Press the key **briefly** several times in succession
- Switch between lower case, upper case and number entry mode: ▶ Press the hash key  When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Entering special characters: ▶ Press the star key  ▶  navigate to the desired character ▶ **Insert**



The availability of special characters depends on the language setting.

Making calls

Making a call

- ▶  enter the number ▶ briefly press the Talk key 
or
- ▶ press and hold the Talk key  ▶  enter the number

Cancel dialling: ▶ Press the End call key 

On an IP-capable Gigaset base

The connection is selected via the send connection (line) set for the handset. To use another line:

- ▶ press and hold the Talk key  ▶  select the line ▶ Dial ▶  enter the number ... the number is dialled approximately 3 seconds after the last digit is entered

Dialling a number from the local directory

- ▶  open the directory ▶  select an entry ▶ press the Talk key 

If multiple numbers are entered:

- ▶  select a number ▶ press the Talk key  ... the number is dialled

 For fast access (quick dial): Assign numbers from the directory to the digit or display keys.

Dialling from a public/central directory

Depending on the base to which the handset is connected, you can dial from a public directory or a central directory on a CAT-iq base.

- ▶ press and hold 

Further information → in the detailed user guide for your telephone

Dialling from the redial list

The redial list contains the 20 numbers last dialled with the handset.

- ▶ Briefly press the Talk key  ... the redial list is opened ▶  select an entry ▶ press the Talk key 

If a name is displayed:

- ▶ **View** ... the number is displayed ▶  browse numbers if necessary ▶ when the desired number is reached press the Talk key 

Managing entries in the redial list

- ▶ Briefly press the Talk key  ... the redial list opens ▶ ... use  to select an entry ▶ Options ... possible options:
 - Copy an entry to the directory: ▶  Copy to Directory ▶ OK
 - Copy the number to the display:
 - ▶  Display number ▶ OK ▶ Use as required  C to change or add ▶  save as a new entry in the directory
 - Delete the selected entry: ▶  Delete entry ▶ OK
 - Delete all entries: ▶  Delete List ▶ OK

Dialling from the call list

The call lists (→ p. 20) contain the most recent accepted, outgoing and missed calls.

- ▶  ▶  Call Lists ▶ OK ▶  select a list ▶ OK ▶  select an entry ▶ press the Talk key 
-  The call lists can be displayed directly by pressing the display key **Calls** if the relevant function has been assigned to the display key.
- The **Missed calls** list can also be opened by pressing the Message key .

Incoming calls

An incoming call is indicated by ringing, by a display on the screen and by the flashing Talk .

Accepting a call:

- Press the Talk key 
- If **Auto Answer** is activated: ▶ Remove the handset from the charging cradle
- Forward to the answer machine: ▶ 
- Accept a call on the headset

Switch off ringtone: ▶ **Silent** ... the call can be accepted for as long as it is shown on the display

Cancel a call and transfer the number to the black list (when enabled):

- ▶ **Block** ▶ **Yes**

Reject the call: ▶ Press the End call key 

-  When the black list is enabled (protection mode **Silent Call**), a call from a number entered in the black list is shown on the display with .

During a conversation

Handsfree mode

Activating/deactivating handsfree mode during a call, when establishing a connection and when listening to the answer machine (where the system has a local answer machine):

- ▶ Press the handsfree key 

Placing the handset in the charging cradle during a call:

- ▶ Press and hold down the handsfree key  ▶ Place the handset in the charging cradle ▶ hold  for a further 2 seconds

Call volume

Applies for the mode currently being used (handsfree, receiver or headset, when the handset has a headset connector):

- ▶ Press  ▶ use  to set the volume ▶ **Save**



The setting is automatically saved after around 3 seconds, even if **Save** is not pressed.

Muting the microphone

When the microphone is switched off, callers will no longer hear you.

Switch the microphone on/off during a call: ▶ Press 

Local answer machine

(only on Gigaset bases with local answer machine)

Switching the answer machine on/off

- ▶    Voice Mail ▶ OK ▶  Activation ▶ OK ▶  select an answer machine (if there are several) ▶ Change ▶  On or Off ▶ Save

Playing back messages

- ▶ Press the Message key  ▶  select an answer machine (if there are messages for several answer machines) ▶ OK

Recording a personal announcement/advisory message

- ▶    Voice Mail ▶ OK ▶  Announcements ▶ OK ▶  Record Announcem. or Record Adv. Msg. ▶ OK ▶  select an answer machine (if there are several) ▶ OK ▶ OK ▶ record an announcement (at least 3 seconds) ... possible options:

Complete the recording and save:

- ▶ **End** ... the announcement is played back for you to check

Cancel the recording:

- ▶ Press the End call key  or Back

Resume the recording:

- ▶ OK

Repeat the recording:

- ▶ New

Call lists

The telephone saves different types of calls (missed, accepted and outgoing calls) in lists.



The base/router to which the handset is registered provides information on call numbers.

Detailed information can be found at → www.gigaset.com/compatibility.

List entry

The following information is displayed in the list entries::

- The list type (in the header)
- Icon for the type of entry:

- Missed calls**
- New missed calls**
- Accepted calls**
- Outgoing calls (redial list)**
- Call on the answer machine (only for a system with a local answer machine)
- New message on the answering machine
- Call blocked, call in the black list

- Caller's number. If the number is stored in the directory, the name and number type (Phone (Home), Phone (Office), Phone (Mobile)) are shown instead. In the event of missed calls, the number of missed calls from this number is also shown in square brackets.
- Connection by which the call was received/made
- Date and time of call (if set)

Example

All calls		
	Frank	[3]
	Today, 15:40	
	089563795	
	13.05.23, 18:32	
	Susan Black	
	12.05.23, 13:12	
	View	Options

Opening the call list

Via the display key: ▶ Calls ▶ select list ▶ OK

Via the menu: ▶ ▶ Call Lists ▶ OK ▶ select list ▶ OK

Via the Message key (missed calls):

 ▶ Press the Message key ▶ Missed Calls: ▶ OK

Calling back a caller from the call list

▶ ▶ Call Lists ▶ OK ▶ select list ▶ OK ▶ select entry ▶ Press the Talk key

Additional options

▶    Call Lists ▶ OK ▶  select list ▶ OK ... possible options:

View an entry: ▶  select entry ▶  View

Number into directory:

▶  select entry ▶ Options ▶  Copy to Directory ▶ OK

Number into black list:

▶  select entry ▶ Options ▶  Copy to Blocklist ▶ OK

Delete an entry:

▶  select entry ▶ Options ▶  Delete entry ▶ OK

Delete list:

▶ Options ▶  Delete List ▶ OK ▶ Yes

Message lists

Notifications about missed calls, messages on the answering machine/network mailbox and missed alarms are saved in the messages list and can be shown on the handset display.

As soon as a **new message** arrives, an advisory tone will sound. The Message key  also flashes (if activated). Activation from the handset is only possible on Gigaset bases. use the web interface as required for CAT-iq routers. Information → user guide of the base/router.

Icons for message types and the number of new messages are shown on the idle display.

Notification for the following message types is available:


 on the answer machine/network mailbox

 in the missed calls list

 in the missed alarms list

 The icon for the network mailbox is always displayed, provided the number is stored in the telephone. The other lists are only displayed if they contain messages.

Example

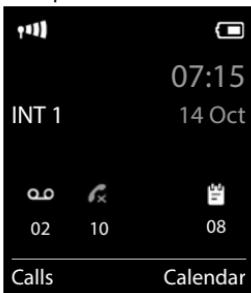

Display messages:

▶ Press the Message key  ... Messages lists that contain messages are displayed, **Mailbox**: is always displayed
The number of new messages is shown in brackets.

▶  Select a list ▶ OK ... the calls or messages are listed
Network mailbox: The network mailbox number is dialled.

Example

Messages & Calls	
Missed Alarms:	(1)
Missed Calls:	(3)
Mailbox:	(0)
Answer Mach.:	(5)
Back	OK



The message list contains an entry for every answer machine assigned to the handset, e.g. for the local answer machine on a Gigaset base/CAT-iq router (if available) or for a network mailbox.

Activating/deactivating Message key flashing

Receipt of new messages is displayed by a flashing message key on the handset. This type of alert can be activated/deactivated for each message type.

In idle status:

- ▶  Press keys ***** **#** **0** **5** **#** ... the number 9 appears in the display ▶ use  to select the message type:
 - Messages on the network mailbox ▶ **7** **4**
 - missed calls ▶ **7** **5**
 - Messages on the answer machine (only for a system with a local answer machine) ▶ **7** **7**
- The number 9 followed by the entry (e.g. 975) is displayed, the current setting for the select message type flashes in the entry field (e.g. 0) ▶ use  to set the action for the arrival of new messages:
 - The Message key flashes ▶ **0** **—**
 - The Message key does not flash ▶ **1** **∞**
- ▶ Confirm selected setting with **OK**
- or
- ▶ return to idle display without making changes: ▶ **Back**



Directories

Local handset directory

The local directory is unique to the handset. However, it is possible to send entries to other handsets.



Information about online directories on IP-capable bases and central directories on CAT-iq bases → user guide of the base.

Opening the directory

- ▶ Briefly press in idle status



Changing the assignment of the control key to a directory: → p. 27

Directory entries

Number of entries: up to 200

Information: First name and surname, up to three telephone numbers, anniversary with alert, VIP ringtone with VIP icon

Length of the entries: Numbers: max. 32 digits
First name, surname: max. 16 characters

Creating an entry

- ▶ ▶ <New Entry> ▶ OK ▶ switch between the entry fields

Example

New Entry	
First Name:	Robert
Surname:	
Tel.1 - Type:	Abc
Save	

Name:
▶ enter the first and/or last name

Numbers:

▶ Tel.1 - Type ▶ select a number type (Home, Office or Mobile) ▶ ▶ enter a number

Enter more numbers: ▶ toggle between the entry fields

Tel.1 - Type/Tel.2 - Type/Tel.3 - Type ▶ enter a number

Anniversary:

▶ activate/deactivate Anniversary ▶ enter date and time ▶ select type of alert (Visual only or a ringtone)

Caller Melody (VIP):

►  select the ringtone that will indicate a call from the participant ... if a **Caller Melody (VIP)** has been assigned, the entry will appear in the directory with the **VIP** icon.

Save entry: ► **Save**



The entry is only valid if it contains at least one number.

Searching for/selecting a directory entry

►  ►  browse searched names

or

►  ►  enter initial letters (max. 8 letters) ... the display jumps to the first name starting with these initial letters ►  continue browsing to the desired entry, if needed

Scroll through directory: ►  ► Press and **hold** 

Displaying/changing an entry

►  ►  select entry ► **View** ►  select the field to be changed ► **Edit**

or

►  ►  select an entry ► **Options** ► **Edit Entry** ► **OK**

Deleting entries

Delete the **selected** entry:

►  ►  select an entry ► **Options** ►  **Delete entry** ► **OK**

Delete all entries: ►  ► **Options** ►  **Delete all** ► **OK** ► **Yes**

Setting the order of the directory entries

Directory entries can be sorted by first name or surname.

►  ► **Options** ►  **Sort by Surname / Sort by First Name**

If no name was entered, the default telephone number is shown in the surname field. These entries appear at the beginning of the list, regardless of how the entries are sorted.

The sort order is as follows:

Space | Digits (0-9) | Letters (alphabetically) | Other characters.

Displaying the number of entries available in the directory

►  Options ►  Available Memory ► OK

Copying number to the directory

Copy numbers to the directory:

- From a list e.g. the call list or the redial list
- When dialling a number

The number is displayed or highlighted.

► Press the display key  or Options ►  Copy to Directory ► OK ... possible options:

Create a new entry:

► <New Entry> ► OK ►  select number type ► OK ► complete entry ► Save

Add number to an existing entry:

►  select an entry ► OK ►  select number type ► OK ... the number is entered or a prompt to overwrite an existing number is displayed ► if required, answer the prompt with Yes/No ► Save

Copying an entry/directory



The sending and receiving handset must both be registered to the same base station.

The other handset and the base station are able to send and receive directory entries.



An external call interrupts the transfer.

Sounds are not transferred. Only the date is transferred for an anniversary.

Both handsets support vCards

- No entry with the name is available: a new entry is created.
- An entry with the name is already available: The entry is expanded to include the new numbers. If the entry contains more numbers than allowed by the recipient handset, a second entry is created with the same name.

The recipient handset does not support vCards

A separate entry is created and sent for each number.

The sending handset does not support vCards

A new entry is created on the receiving handset and the transferred number is added to the **Phone (Home)** field. If an entry with this number already exists, the copied number is discarded.

Copying individual entries

- ▶   select the desired entry ▶ Options ▶  Copy entry ▶ OK ▶  to Internal ▶ OK ▶  select the receiving handset ▶ OK ...the entry is copied

Copy the next entry after successful transfer: ▶ Press Yes or No

Copying the entire directory

- ▶  ▶ Options ▶  Copy all ▶ OK ▶  to Internal ▶ OK ▶  select the receiving handset ▶ OK ...the entries are copied one after the other

Base directory

(depending on the base)

If the DECT base (on a CAT-iq router for example) provides a separate directory, it can also be displayed and edited on the handset.

►  ►   Contacts ► OK ►  Base Directory ► OK ... The first entry in the phone directory is displayed

or

► Press and **hold** the Control button 

For information on the base directory: ► Documentation relating to your base/router

Transferring contacts

Transfer contacts from the base directory to the local directory (and in the other direction).

► Press and  **hold** the Control key ►  Base Directory / Handset Directory ► OK ►  Select an entry as required ►  Copy entry / Copy all ► OK ►  to Handset Directory / to Base Directory ► OK

Assignment of the control key to a directory

Changing the assignment of the control key to a directory

Briefly press the control key  to open the preferred directory. The default directory is the local one.

The preferred directory is the one

- opened with a **brief** press of the control key 
- into which a number is transferred using  when it is dialled
- in which a search is performed for the right name for a phone number (such as for an incoming call for showing in the display or when transferring a call to a list)

The local directory is the default preferred directory.

Changing the preferred directory:

►  ►   Contacts ► OK ►  Preferred Directory ► OK ►  select Handset Directory or Base Directory ► OK

Additional functions



The functions actually available on your telephone and how they are operated depends on the base/router to which the handset is registered.

The procedure required for your telephone may differ from the procedures described here. Depending on the number and type of available functions, these may be provided in different menus, e.g. at top level or in a submenu.



Additional information

Regarding the telephone system, if the handset is connected to a Gigaset base:

- User guide for your Gigaset telephone

Regarding the telephone system, if the handset is connected to another base/router:

- Documentation regarding your base/your router

All Gigaset user guides in PDF format:

- www.gigaset.com/manuals

Calendar

You can remind yourself of up to **30 appointments**.

In the calendar, the current day is outlined in white; on days with appointments, the numbers are displayed in colour. When a day is selected, it will be outlined in colour.

June 2023						
Mo	Tu	We	Th	Fr	Sa	Su
01	02	03				
04	05	06	07	08	09	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	

Back

OK

Saving appointments to the calendar



Date and time have been set.

► ► Additional Features ► OK ► Calendar ► OK ► select desired day ► OK . . . then

Switch on/off:

► Activation: select On or Off

Enter date:

► Date . . . the selected day has been pre-set ► enter new date

Enter time:

► Time ► enter hours and minutes of the appointment

Set name:

► Text ► enter a description of the appointment (e.g. evening meal, meeting)

Set alarm tone:

► Signal ► select the melody of the reminder alarm or deactivate the acoustic signal

Enter information for the appointment:

► select successively Date, Time, Text and Signal ► use or to set the relevant value ► Save

Save appointment: ► Save



If an appointment has already been entered: ► <New Entry> ► OK ► then enter information for the appointment.

Notification of appointments/anniversaries

Anniversaries are transferred from the directory and displayed as an appointment. An appointment/anniversary is displayed in idle status and the selected ringtone plays for 60 seconds as a notification.

Acknowledge and stop the reminder: ► Press the display key OFF



During a call, a reminder is indicated on the handset **once** with an advisory tone on the handset.

Displaying missed appointments/anniversaries

The following appointments and anniversaries are saved in the **Missed Alarms** list:

- The appointment/anniversary call was not acknowledged.
- The appointment/anniversary was notified during a phone call.
- The handset was switched off at the time of the appointment/anniversary.

The last 10 entries are stored. The  icon and the number of new entries are shown in the display. The most recent entry appears at the top of the list.

Opening the list

► Press the Message key  ►  **Missed Alarms:** ► OK ►  browse through the list of any appointments

or

►  ►   **Additional Features** ► OK ►  **Missed Alarms** ► OK

Each entry is displayed with the number or name, date and time. The most recent entry appears at the top of the list.

Delete an appointment/anniversary: ► **Delete**

Displaying/changing/deleting stored appointments

►  ►   **Additional Features** ► OK ►  **Calendar** ► OK ►  select day ► OK... the appointment list is displayed ►  select date ... possible options:

Display appointment details:

► **View** ... the appointment settings are displayed

Change appointment:

► **View** ► **Edit**

or ► **Options** ►  **Edit Entry** ► OK

Activate/deactivate appointment:

► **Options** ►  **Activate/Deactivate** ► OK

Delete appointment: ► **Options** ►  **Delete entry** ► OK

Delete all appointments for a day:

► **Options** ►  **Delete all Appoints.** ► OK ► Yes

Timer

Setting the timer (countdown)

►  Additional Features ► OK ►  Timer ► OK ... then

Enable/disable: ► Activation:  select On or Off

Set the duration: ►  Duration ► use  to enter the hours and minutes for the timer

Min.: 00:01 (one minute); Max.: 23:59 (23 hours, 59 minutes)

Save the timer: ► Save

The timer starts the countdown. In the idle display, icon  and the remaining hours and minutes are displayed until one minute is left. From this point, the remaining seconds are counted down. At the end of the countdown, the alarm is triggered.

Disabling/repeating the alarm

Switch off the alarm: ► OFF

Repeat the alarm: ► Restart ... the timer display is displayed again ► set another duration as required ► Save ... the countdown is restarted

Alarm clock



Date and time have been set.

Activating/deactivating the alarm clock and setting the wake-up time

►  Additional Features ► OK ►  Alarm Clock ► OK ... then

Switch on/off: ► Activation:  select On or Off

Setting the wake-up time:

►  Time ►  enter hours and minutes

Set days: ►  Occurrence ►  switch between Monday-Friday and Daily

Set the volume: ►  Volume ►  set volume in 5 levels s or select crescendo (increasing volume)

Set alarm: ►  Melody ►  select a ringtone for the alarm

Enter alarm data: ►  select successively Time, Occurrence, Volume and Melody ► use  or  to set the relevant value ► Save

Save settings: ► Save

When the alarm clock is activated, the icon  and the wake-up time are displayed in idle display.

Alarm

An alarm is shown on the display and indicated by the selected ringtone melody. The alarm sounds for 60 seconds. If no key is pressed, the alarm is repeated after 5 minutes. After the second repetition, the alarm call is deactivated for 24 hours.



During a call, the alarm is only indicated by a short tone.

Switching off/repeating the alarm after an interval (snooze mode)

Deactivate the alarm: ► OFF

Repeat the alarm (snooze mode): ► Press Snooze or any key ... the alarm is switched off and repeated after 5 minutes.

Baby monitor

When the baby monitor is switched on, the stored (internal or external) destination number is called as soon as a defined noise level is exceeded in the vicinity of the handset. The alarm to an external number is cancelled after approximately 90 seconds.

You can answer the alarm using the **Two Way Talk** function. This function is used to switch the loudspeaker of the handset located in the baby's room on or off.

In baby monitor mode, incoming calls are only indicated on the display (**without ringtone**). The display backlight is reduced to 50%. Advisory tones are deactivated. All keys are locked, with the exception of the display keys and the centre of the control key.

If you accept an incoming call, the baby monitor mode is suspended for the duration of the call, but the function **remains** activated. The baby monitor mode is not deactivated by switching the handset off and on again.



The handset should be positioned 1 to 2 metres away from the baby. The microphone must point towards the baby.

Activating the function reduces the operating time of your handset. For that reason, place the handset in the charging cradle if necessary.

The baby monitor is activated 20 seconds after switching on.

The microphone of the handsfree device is always used, even if a headset is connected.

The answer machine for the destination number must be switched off.

After switching on:

- Test sensitivity.
- Test the connection, if the alarm is being forwarded to an external number.

Activating and setting the baby monitor

- ▶   Additional Features ▶ OK ▶  Baby Monitor ▶ OK ... then
- Switch on/off:
- ▶ Activation:  select On or Off
- Enter destination:
- ▶  Send alarm to ▶  select External or Internal
- External: ▶  Number ▶  select number or select a number from the directory: ▶ 
- Internal: ▶  Handset ▶ Change ▶  select the handset ▶ OK

Activate/deactivate two-way talk:

- ▶  Two Way Talk ▶  select On or Off


Set microphone sensitivity:

- ▶  Sensitivity ▶  select High or Low

Save settings: ▶ Save

The destination number is displayed in idle display when the baby monitor is activated.

Baby Monitor activated

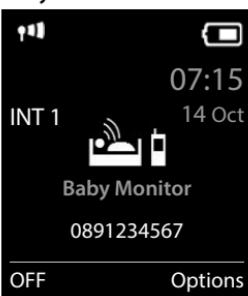

Deactivate baby monitor / Cancel alarm

Deactivate the baby monitor:

- ▶ In idle status press the display key OFF

Cancel the alarm:

- ▶ Press the End call key  during an alarm

Deactivate the baby monitor remotely



The alarm is forwarded to an external destination number.

The receiving phone supports tone dialling.

- ▶ Accept alarm call ▶ Press keys  

The baby monitor is deactivated and the handset is in idle status. The baby monitor settings on the handset (e.g. no ringtone) will remain activated until you press the display key OFF.



The baby monitor cannot be reactivated remotely.

Reactivate: ➔ p. 33

ECO DECT

(depending on the base)

The device range is set to maximum as default. This guarantees the best connection between the handset and the base station. In idle status, the handset will not function (as it is not transmitting). Only the base station will maintain contact with the handset via a low wireless signal. During a call, the transmission power automatically adapts to the distance between the base station and handset. The smaller the distance to the base, the lower the radiation.

To reduce the radiation further:

Reducing radiation by up to 80%

- ▶  ▶   Settings ▶ OK ▶  ECO DECT ▶ OK ▶ Maximum Range ▶
- Change  = deactivated



The range is also reduced with this setting.

It is not possible to use a repeater to increase the range.

Deactivating radiation in idle status

- ▶  ▶   Settings ▶ OK ▶  ECO DECT ▶ OK ▶  No Radiation ▶
- Change  = activated



To benefit from the advantages of the setting **No Radiation**, all registered handsets must support this feature.

If the setting **No Radiation** is activated and a handset is registered to the base that does not support this feature, **No Radiation** is automatically deactivated. As soon as this handset is de-registered, **No Radiation** will automatically be re-activated.

The wireless connection will only be established for an incoming or outgoing call and the connection will be delayed by about 2 seconds.

In order that a handset can establish a wireless connection with the base station more quickly for an incoming call, it must "listen" to the base station more often, i.e. scan the environment. This increases power consumption and reduces the standby and talk-time of the handset.

When **No Radiation** is activated, there will be no range display/range alarm on the handset. Contactability can be tested by attempting to establish a connection.

- ▶ Press and hold the Talk key  ... the dialling tone sounds.

Protection against unwanted calls

Time control for external calls



Date and time have been set.

Enter a time period during which the handset should suspend ringing to indicate external calls e.g. during the night.

- ▶ **Control** ... then
- Switch on/off: select **On** or **Off**
- Enter time: switch between **Suspend ring. from** and **Suspend ring. until** enter start and end in 4-digit format
- Save: **Save**

Example



The time control only applies to the handset for which the setting is configured.

The telephone will continue to ring for numbers that have been assigned to a VIP group in the directory.

Protection from anonymous callers

The handset will not ring if callers' numbers are not revealed. This setting can be applied to only one or to all registered handsets.

For one handset

- ▶ **Edit** (= activated) ... the call is only signalled on the display

For all handsets

(only on some Gigaset bases)

- ▶ **Edit** (= activated) **Protection Mode:**
- No Protection** Anonymous calls are indicated in the same way as identified numbers.
- Silent Call** The telephone will not ring and the incoming call will only appear in the display.
- Block Call** The telephone will not ring and the incoming call will not appear in the display. The caller will hear the busy tone.
- Save settings: **Save**

Only put through known callers

(not on all bases)



The system PIN is **not** 0000 (default).

Only callers entered in the directory are put through:

▶
(= enabled)

When the function is enabled, the icon is shown on the display.



As soon as one of your contacts changes his or her number, this number must also be changed in the directory. **Otherwise you will no longer receive calls from this contact.**

Black list

When the black list function is activated, calls from black list numbers are not indicated or are only indicated in the display.


The black list is enabled (denoted by in the menu) when **Silent Call** or **Block Call** is selected as the protection mode. It is enabled automatically with the first entry.

Setting the protection mode

▶
 select desired protection

No Protection	All calls are indicated, including from callers whose numbers are on the black list.
Silent Call	The telephone will not ring and the incoming call will only appear in the display.
Block Call	The telephone will not ring and the incoming call will not appear in the display.
Save settings:	▶

Displaying/editing the black list

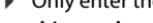- ▶       
- ▶ **Numbers**  ... the list of blocked numbers is displayed ... possible options:
 - First entry:   enter the number 
 - Another entry:     enter the number 
 - Blocking a number range:
 - ▶ Only enter the starting digits of the number  prompt with **Yes**
 - For dynamic black list, protect number before deletion:
 - ▶ Confirm the **Lock this number?** prompt with **Yes**
 - Change entry:    
 - Protect a number:     
- Protect a number:   ... The number in the list is given the  symbol, it is also not deleted if the dynamic black list is enabled
- Searching for a number:
 - ▶     enter the number 
- Delete entry:   
- Delete list:    

Transferring a caller number to the black list



Phone numbers transferred to the black list are only blocked when the black list is enabled.

On incoming call (only possible when black list enabled)

- ▶ Press the Display key **Block**  ... The phone number is saved to the black list

During a call

- ▶    ... The call is cancelled and the phone number saved to the black list

Transferring a number from a call list to the black list

- ▶          

Calls from blocked numbers are displayed in the call list with symbol .

Dynamic black list

A spam number is not usually active for a long time. New call numbers are generated continually for the same cold calls. However, the number of black list entries is limited by the storage space.

The black list is managed as a dynamic list. The oldest number is removed from the list when the list is full, and a new number is entered.

Enabling/disabling dynamic function:

- ▶    **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶  **Blocklist** ▶ **OK** ▶
 **Dynamic List** ▶ **Edit**  = activated)

 Numbers protected from deletion are not removed.

Activating/deactivating first ring muting

When the black list is enabled, the first ringtone is always suppressed (to first analyse the black list). Enabling/disabling suppression of the first ringtone (when the phone is idle):

- ▶                  ... the current setting flashes in the input field
(e.g. 1) ... then
- Do not mute the first ringtone:  ▶ **OK**
- Mute the first ringtone (default setting):  ▶ **OK**

Setting the handset

Setting the date and time manually

(depending on the base)

To ensure you have the correct time for incoming calls and to use the alarm clock and calendar, for example, the date and time must be set.



The address of a time server in the Internet is stored in the phone/router. The date and time are taken from this time server provided the phone/router is connected to the Internet and synchronisation with the time server is activated. Manual settings are overwritten in this case.

If the date and time have not yet been set on the handset, the display key **Set Time** appears.

- ▶ Press the display key **Set Time**

or

- ▶ **Settings** ▶ **OK** ▶ **Date/Time** ▶ **OK** ... then

Set the date: ▶ **Date**: use to enter the day, month and year in 8-digit format
 Set the time: ▶ **Time** ▶ enter hours and minutes in 4-digit format
 Save settings: ▶ **Save**

Changing the language

- ▶ **Settings** ▶ **OK** ▶ **Language** ▶ **OK** ▶ **select language** ▶ **Select** (= selected)

If the handset has been set to an incomprehensible language:

- ▶ ▶ Press the keys **6** **5** **slowly** one after the other ▶ **select the correct language** ▶ **press the right display key**

Select country (if available)

Select the country where you are using the phone. Your selection is used for country-specific defaults.

- ▶ **Settings** ▶ **OK** ▶ **Telephony** ▶ **OK** ▶ **Country** ▶ **OK** ▶ **select the country** ▶ **Select** (= selected)

Display

Screensaver

(depending on the base)

A digital or analogue clock and info services can be selected to be displayed as a screensaver when in idle status.

►    **Settings** ► **OK** ►  **Display** ► **OK** ►  **Screensaver** ► **Edit**  = on) ...
then

Switch on/off: ► **Activation:**  select **On** or **Off**

Select screensaver: ►  **Selection** ►  select a screensaver
(**Digital Clock / Analog Clock / Info Services**)

View screensaver: ► **View**

Save selection: ► **Save**

The screensaver is activated approx. 10 seconds after the display has changed to idle status.

End screensaver

► Press the End call key  briefly ... the display changes to idle status

Display of info services as screensaver

(only on a Gigaset-IP base)



Info Services are activated via the web configurator.

The telephone is connected to the Internet.

Example: Enable weather service as screensaver

Enable info services as screensaver:

►    **Settings** ► **OK** ►  **Display** ► **OK** ►  **Screensaver** ► **Edit** ►
use  to select **Activation: On** ►  **Selection** ► select as screensaver with  **Info Services** ► **Save**

Select locations:

►    **Additional Features** ►  **Info Centre** ►  **Weather** ► **OK** ►  **Add locations** ► **OK** ► specify location names with  ► **OK** ... a list of locations with this name is displayed ► select location with  ► **OK** ► **Save**

Multiple locations can be entered. Once you have entered all locations required: ► Use <- to go back

Enable screensaver:

- ▶  ▶   Additional Features ▶  Info Centre ▶  Screensaver ▶ OK ▶  Weather ▶ OK ▶ select location with  ▶ Save



The type of info service available to your phone is set on the Internet on the Gigaset.net server.

If no information is currently available, the digital time (**Digital Clock**) is displayed instead until information is available again.

Switching Info Services on/off

(only on a Gigaset-IP base)

The text information from the Internet that is set for the screensaver **Info Services** can be displayed as a scrolling message in idle status.

- ▶  ▶   Settings ▶ OK ▶  Display ▶ OK ▶  Info Ticker ▶ Edit (= on)

The text appears as soon as the telephone changes to idle status. If a message is shown in idle status, the info text is not displayed.

Large font

Show text and icons in call lists and in the directory in a larger size in order to improve legibility. Only one entry is shown in the display and names are abbreviated if necessary. The number is displayed in large font when it is dialled.

- ▶  ▶   Settings ▶ OK ▶  Display ▶ OK ▶  Large Font ▶ Change
(= activated)

Colour scheme

You can choose from a range of colour combinations for the display.

- ▶  ▶   Settings ▶ OK ▶  Display ▶ OK ▶  Colour Schemes ▶ OK ▶  select the desired colour scheme ▶ Select (= selected)

Display backlight

The display backlight always illuminates when the handset is taken out of the base station/charging cradle or when a key is pressed. Any **digit keys** that are pressed appear on the display for pre-dialling.

Switch the display backlight on/off when in idle status:

- ▶     **Display**   **Backlight**  ... then

Backlight when in the charging cradle:

- ▶  **In Charger:**  select On or Off

Backlight when not in the charging cradle:

- ▶  **Out of Charger**  select On or Off

Backlight during a call:

- ▶  **In Talk State**  select On or Off

Save selection: 



The handset's standby time may be significantly reduced if the display backlight is switched on.

Changing the earpiece and handsfree volume

You can set the volume of the earpiece and speaker at 5 levels independently of each other.

During a conversation

- ▶  **Handset Volume**  select volume  **Save** ... the setting is saved



Without saving, the setting is automatically saved after around 3 seconds.

In idle status

- ▶    **Audio Settings**   **Handset Volume**  ... then

For the earpiece:  **Earpiece:**  set the volume

For the speaker:  **Speaker**  set the volume

Save settings: 

Earpiece and handsfree profile

Select a profile for the **earpiece** and **handsfree mode** in order to adapt the telephone as much as possible to the surroundings. Check which is the most comfortable profile for you and your caller.

- ▶    **Settings**   **Audio Settings**   **Acoustic Profiles** 
- ▶  **Earpiece Profiles / Handsfree Profiles**   **select profile** 
- ▶ **Select** ( = selected)

Earpiece Profiles: **High** or **Low** (default setting)

Handsfree Profiles: **Profile 1** (default setting) or **Profile 2**

Ringtones

Ringtone volume

Volume can be set at 5 levels or crescendo (increasing volume).

- ▶    **Settings**   **Audio Settings**   **Ringtones (Handset)** 
- ▶ **OK**  **Volume**   **select For internal calls and alarms or External Calls**   **set volume**  **Save**

Ringtone melody

Set different ringtones for internal and external calls for every available receive connection of the telephone (Fixed Line, IP1) or set the same ringtone for **All Calls**.

- ▶    **Settings**   **Audio Settings**   **Ringtones (Handset)** 
- ▶  **Melodies**   **select the connection**   **select the ringtone/melody in each case**  **Save**

Switching the ringtone on/off

Switching the ringtone off permanently

- ▶ Press and **hold**  ... the following icon appears in the status bar 

Switching the ringtone on permanently

- ▶ Press and **hold** 

Switching the ringtone off for the current call

- ▶ Press **Silent** or the End call key 

Switching the alert tone (beep) on/off

Switch on an alert tone (beep) instead of the ringtone:

- ▶ Press and **hold** the star key  ▶ Press **Beep** within 3 seconds ... the following icon appears in the status bar 

Switching off the alert tone: ▶ Press and **hold** the star key 

Switching advisory tones on/off

The handset notifies acoustically about different activities and statuses. These advisory tones can be switched on/off independently of each other.

- ▶  ▶  ▶  **Settings** ▶ **OK** ▶  **Audio Settings** ▶ **OK** ▶  **Advisory Tones** ▶ **OK** ...
then

Tone when keys are pressed:

- ▶  **Key Tones:**  select **On** or **Off**

Confirmation/error tone after making entries, advisory tone when a new message has been received:

- ▶  **Confirmation** ▶  select **On** or **Off**

Warning tone when there are fewer than 10 minutes of talktime remaining (every 60 seconds):

- ▶  **Battery** ▶  select **On** or **Off**

Warning tone when the handset is moved out of range of the base station:

- ▶  **Out of Range:**  select **On** or **Off**

Save settings:

- ▶ **Save**



There is no battery warning when the baby monitor is switched on.

Auto answer

When Auto answer is enabled, the handset accepts an incoming call as soon as it is removed from the charging cradle.

- ▶  ▶  ▶  **Settings** ▶ **OK** ▶  **Telephony** ▶ **OK** ▶ **Auto Answer** ▶ **Change**
( = activated)

Regardless of the **Auto Answer** setting, the connection ends as soon as you place the handset back in the charging cradle.

Fast access to numbers and functions

Assigning a number to digit keys (quick dial)

It is possible to assign a **number from the directory** to the keys **[2]** to **[9]**.



A number has not been assigned to the digit key.

- ▶ Press and **hold** the digit key

or

- ▶ **Briefly** press the digit key ▶ Press the display key **QuickDial**

The directory opens.

- ▶ use to select an entry ▶ **OK** ▶ use to select a number if necessary ▶ **OK** ...the entry is saved to the digit key



If the entry in the directory is deleted later, this will not affect the assignment of the digit key.

Dialling a number

- ▶ Press and **hold** the digit key ... the number is dialled immediately

or

- ▶ **Briefly** press the digit key ... the number/name (possibly in abbreviated form) is shown on the left display key ▶ press the display key ... the number is dialled

Changing the digit key assignment

- ▶ **Briefly** press the digit key ▶ **Change** ... the directory is opened ... possible options:

Change the assignment: ▶ select an entry ▶ **OK** ▶ select a number if required ▶ **OK**

Delete the assignment: ▶ **Clear Key**

Assigning display keys / Changing assignments

The left and right display keys have a **function** preset by default when in idle mode. The key can be re-assigned.

- ▶ Press and **hold** the left or right display key in idle status ... the list of possible key assignments is opened ▶ select the function ▶ **OK** ... The assignment of the display key is changed

Possible functions: **Alarm Clock, Redial, Handset Directory** ... More functions are available in **More Functions...**



The availability of functions depends on the base.

Starting a function

With the telephone in idle status: ▶ **Briefly** press ... the assigned function is executed

Changing the name of a connection (line)

(only on a CAT-iq router)

▶    Settings ▶ OK ▶   Telephony ▶ OK ▶   Connections ▶ OK ... all available connections (lines) are displayed ▶  select connection ▶ OK ▶   Connection Name ▶ OK ▶  change the name of the connection ▶ Save

Assigning handsets to a connection (line)

(only on a CAT-iq router)

Multiple handsets can be assigned to a connection. Incoming calls to the number designated to a connection will be forwarded to all handsets assigned to the connection.

▶    Settings ▶ OK ▶   Telephony ▶ OK ▶   Connections ▶ OK ▶  select connection ▶ OK ▶  Assigned Handsets ... all registered handsets are displayed ▶  select handset ▶ Change  = handset is assigned

Permit/prevent multiple calls

(only on a CAT-iq router)

If the function is activated, multiple calls can be made in parallel.

▶    Settings ▶ OK ▶   Telephony ▶ OK ▶   Connections ▶ OK ▶  select connection ▶ OK ▶  Multiple Calls ▶ Change  = activated

Permit/prevent internal listening in

(only on a CAT-iq router)

If the function is enabled, an internal party can listen in to an external call and take part in the conversation (conference).

▶    Settings ▶ OK ▶   Telephony ▶ OK ▶   Connections ▶ OK ▶  select connection ▶ OK ▶  Listening In ▶ OK ▶ Change  = activated

Show system and line statuses

(only on a CAT-iq base, V2.1 and later)

Showing the system status

- ▶         ... The System Status is shown (OK or Error)

When there is a system error, show information on the fault cause: ▶ **Details**

Show line status

- ▶         ... The following status information is shown: Line Status, Line State, Call Divert

Show more information (dependent on status): ▶ **Details**

Example: **Line Status = Error**, **Details** shows additional information on the type of fault


 Status details are only updated when the relevant menu is accessed. If the status changes during the display, the data is not updated.

Show status messages in idle display

- ▶           

If a status display is enabled, relevant messages are shown in the idle display. If there is more than one active message, the one with the highest priority is shown, e.g. **System error** or **Line error** before **Call Divert active**.

Example

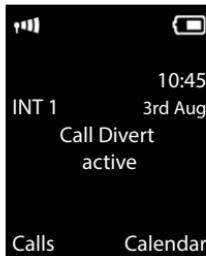

Handset update

The handset supports firmware updating via the DECT radio link to the base/router (SUOTA = Software Update Over The Air).

 The base/router to which the handset is registered must also support this function
([→ www.gigaset.com/compatibility](http://www.gigaset.com/compatibility))

The phone checks whether new firmware is available for the handset. If it is, a message is displayed.

- ▶ Start the firmware update with **Yes**.

Enable/disable automatic check for new firmware:

- ▶        Automatic Check  Change ( = enabled)

Start the firmware update manually

- ▶        ... if there is new firmware, the update will start



The update process may take up to 30 minutes. During this time, only restricted handset use is available.

Checking the firmware version

- ▶       ... the firmware version of the handset is displayed

Testing DECT encryption

(depending on the base)

When this function is enabled, the handset tests whether the DECT connection to the base is secure, i.e. is encrypted. If not, a message is shown on the display.

►    **Settings** ► **OK** ►  **System** ► **OK** ►  **Security Check** ► **Change** (= enabled)



If a repeater without encryption is used, the secure connection test must be disabled.

If, on the base, encryption is disabled at a later time whilst the secure connection test is enabled (because a repeater needs to be connected for example), **Press 'info' to read security info** is shown on the handset.

► **Info** ... the situation is explained ► **Sec. off** ... the secure connection test is disabled

During a call

A sound and a message on the display indicate when encryption is disabled on the base during a call.

Continue call: ► **Yes**

Stop call: ► **No**

If neither is pressed, the call is stopped automatically after a certain time.

Testing the secure connection status during a call:

► Press the Hash key  for a longer time ... the secure connection status is shown on the display

Resetting a handset

Reset any individual settings and changes that you have made.

►    **Settings** ► **OK** ►  **System** ► **OK** ►  **Handset Reset** ► **OK** ► **Yes** ...
the handset's settings are reset



The following settings are **not** affected by a reset

- Registration of the handset to the base station
- Date and time
- Directory entries and call lists

Appendix

Service (Customer Care)

Step by step towards your solution with Gigaset Customer Care

www.gigaset.com/service.



Visit our Customer Care pages

Here you will find:

- Frequently asked questions
- Free software and user manual downloads
- Compatibility checks



Contact our Customer Care team

Couldn't find a solution in the FAQs section?

We are happy to help...

... **online:**

via our contact form on the customer service page

... **by telephone:**

Customer Service Switzerland: 0848 212 000

(0.09 Fr. per minute from the Swiss phone network. For calls from mobile phone networks, other prices may apply)

Please have your proof of purchase ready when calling.

Please note that if the Gigaset product is not sold by authorised dealers in the national territory the product may not be fully compatible with the national telephone network. It is clearly specified on the box near the CE mark for which country/countries the equipment has been developed.

If the equipment is used in a manner inconsistent with this advice or with the instructions of the manual and on the product itself, this may have implications on the conditions for warranty or guarantee claims (repair or exchange of product).

In order to make use of the warranty, the product purchaser is asked to submit a receipt which proves the date of purchase (date from which the warranty period starts) and the type of goods that have been purchased.

For questions about VoIP access, please contact the respective service provider.

Warranty certificate for Switzerland

The consumer (customer) is covered by a durability warranty against the vendor without prejudice to his claims for defects and under the following conditions:

- New devices and their components in which a defect is detected within 24 months from the date of purchase resulting from a manufacturing and/or materials fault will, at the customer's discretion, be exchanged free of charge for a technologically current device or repaired by Gigaset Communications. For wearing parts (such as batteries, keypads, casing, small casing parts and protective covers as included in the delivery), this guarantee of durability applies for six (6) months from the date of purchase.
- This warranty does not apply in the event a defect to devices is attributable to improper treatment and/or a failure to follow the operating guides.
- This warranty does not cover any services provided by the appointed dealer or the customer itself (such as installation, configuration and software downloads). Manuals and, where applicable, accompanying software on a separate data carrier are also excluded from the warranty.
- Proof of purchase with date of purchase is required as evidence of a valid warranty. Warranty claims must be asserted within two (2) months of the awareness of a warranty event.
- Replaced devices or their components returned to Gigaset Communications during the course of an exchange are transferred to the ownership of Gigaset Communications.
- This warranty applies for new devices purchased in Switzerland.

The warrantor is Gigaset Communications GmbH, Frankenstraße 2, D-46395 Bocholt.

- No further or different claims arising from this manufacturer's warranty will be accepted. Gigaset Communications accepts no liability for operational interruptions, loss of profit and loss of data, software additionally installed by the customer or other information. The customer is responsible for safeguarding these. The disclaimer does not apply if liability is mandatory, for example under the Product Liability Act, in cases of wilful intent, gross negligence, and as a result of loss of life, limbs or health.
- Successful assertion of a warranty claim does not extend the term of the warranty.
- Unless there is a warranty event, Gigaset Communications reserves the right to charge the customer for an exchange or repair. Gigaset Communications will inform the customer of this in advance.
- Gigaset Communications reserves the right to have its service work carried out by a subcontractor. Refer to www.gigaset.com/service for the address.
- Any change to the rules governing burden of proof to the detriment of the customer is not connected with the above rules.

To redeem a warranty, please contact our hotline (Tel. 0848 212 000).

Liability

Your handset's display consists of pixels. Each pixel consists of three sub-pixels (red, green, blue).

It may be the case that a sub-pixel is missing or has a colour deviation.

A warranty claim is only valid if the maximum number of permitted pixel errors is exceeded.

Description	Maximum number of permitted pixel errors
Colour illuminated sub-pixels	1
Dark sub-pixels	1
Total number of coloured and dark sub-pixels	1



Signs of wear on the display and casing are excluded from the warranty.

Manufacturer's advice

Authorisation

This device is intended for use worldwide. Use outside the European Economic Area (with the exception of Switzerland) is subject to national approval.

Country-specific requirements have been taken into consideration.

Gigaset Communications GmbH hereby declares that the following radio equipment types are in compliance with Directive 2014/53/EU:

S30852-S3051-xxxx

The full text of the EU declaration of conformity is available at the following internet address:
www.gigaset.com/docs.

This declaration could also be available in the "International Declarations of Conformity" or "European Declarations of Conformity" files.

Therefore please check all of these files.

Data protection

We at Gigaset take the protection of our customers' data very seriously. It is precisely for this reason that we are ensuring all our products feature "Privacy by Design" as standard. All information we collect is used to make our products as good as possible. In the process, we ensure your details are protected and only used for the purposes of making available to you a product or service. We know which path your data takes through the company and ensure this happens in line with data protection specifications in a secure and protected manner.

The full text of the privacy policy is available from: www.gigaset.com/privacy-policy

Environment

Environmental management system

Further information on environmentally friendly products and processes is available on the Internet at www.gigaset.com.



Gigaset Communications GmbH is certified pursuant to the international standards ISO 14001 and ISO 9001.

ISO 14001 (Environment): Certified since September 2007 by TÜV SÜD Management Service GmbH.

ISO 9001 (Quality): Certified since 17/02/1994 by TÜV SÜD Management Service GmbH.

Disposal

Batteries should not be disposed of in general household waste. Observe the local waste disposal regulations, details of which can be obtained from your local authority.

Information about disposal



At the end of its service life, this product must not be disposed of with normal household waste, but must be handed in at the place of purchase or at a collection point for recycling electrical and electronic devices in accordance with the ordinance governing the return, acceptance and disposal of electrical and electronic equipment (VREG).

The materials can be recycled according to their identification. By reusing and recycling materials along with other methods of recycling used equipment, you can make an important contribution to protecting the environment.

Care

Wipe the device with a **damp** cloth or an antistatic cloth. Do not use solvents or microfibre cloths.

Never use a dry cloth; this can cause static.

In rare cases, contact with chemical substances can cause changes to the device's exterior. Due to the wide variety of chemical products available on the market, it was not possible to test all substances.

Impairments in high-gloss finishes can be carefully removed using display polishes for mobile phones.

Contact with liquid



If the device comes into contact with liquid:

- 1 Unplug all cables from the device.
- 2 Remove the batteries and leave the battery compartment open.
- 3 Allow the liquid to drain from the device.
- 4 Pat all parts dry.
- 5 Place the device in a dry, warm place **for at least 72 hours (not in a microwave, oven etc.)** with the battery compartment open and the keypad facing down (if applicable).
- 6 Do not switch on the device again until it is completely dry.

When it has fully dried out, you will normally be able to use it again.

Technical data

Batteries

Technology: 2 x AAA NiMH
 Voltage: 1.2 V
 Capacity: 750 mAh

Handset operating times/charging times

The operating time of your Gigaset depends on the capacity of the battery, its age and the way it is used.
 (All times are maximum possible times.)

Standby time (hours)	320 / 190 *
Talktime (hours)	17
Operating time with 1.5 hours of calls per day (hours)	160 / 115*
Charging time in charging cradle (hours)	8

* With **No Radiation** function disabled / with **No Radiation** function enabled, with no display lighting when the phone is idle and during a call

Power consumption of the handset in the charging cradle

When charging: approx. 1.50 W
 To maintain the charge status: approx. 0.50 W

General specifications

DECT standard	Supported
GAP standard	Supported
No. of channels	60 duplex channels
Radio frequency range	1880-1900 MHz
Duplex mode	Time division multiplexing, 10 ms frame length
Repetition frequency of the transmission pulse	100 Hz
Duration of the transmission pulse	370 µs
Channel grid	1728 kHz
Bit rate	1152 kbit/s
Modulation	GFSK
Language code	32 kbit/s
Transmission power	10 mW average power per channel, 250 mW pulse power
Range	Up to 50 m indoors, up to 300 m outdoors
Environmental conditions for operation	+5 °C to +45 °C; 20% to 75% relative humidity
Dialling mode	DTMF (tone dialling)

Power adapter

Manufacturer	Salom Electric (Xiamen) Co. Ltd. Commercial registration number: 91350200612003878C 31 Building, Huli Industrial District, Xiamen, Fujian 361006, P.R. China
	Salcomp (Shenzen) Co. Ltd. Commercial registration number: 91440300618932635P Salcomp Road, Furond Industrial Area, Xinqiao, Shajing, Baoan District, Shenzen 518125 China
Model identifier	C705 (EU variant) C710 (UK variant)
Input voltage	230 V
Input AC frequency	50 Hz
Output voltage	4 V
Output current	0.15 A
Output power	0.6 W
Average active efficiency	> 46%
Efficiency at low load (10%)	not relevant – only at output power > 10 W
No-load power consumption	< 0.10 W

Character charts

The character set used on the handset is dependent on the language set.

Standard characters

Press the relevant key several times.

	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x
1	1									
2	a	b	c	2	ä	á	à	â	ã	ç
3	d	e	f	3	ë	é	è	ê		
4	g	h	i	4	ï	í	ì	î		
5	j	k	l	5						
6	m	n	o	6	ö	ñ	ó	ò	ô	õ
7	p	q	r	s	7	ß				
8	t	u	v	8	ü	ú	ù	û		
9	w	x	y	z	9	ÿ	ý	æ	ø	å
0	1)	.	,	?	!	← ²⁾	0			

1) Space

2) Line break

Display icons

The following icons are displayed depending on the settings and the operating status of your telephone.

Icons in the status bar

Icon	Meaning
	Signal strength (No Radiation off) 1% -100% white, if Maximum Range on; green, if Maximum Range off
	Red: no connection to the base station
	No Radiation activated: white, if Maximum Range on; green, if Maximum Range off
	Answer machine activated indicator Flashes: Answer machine is recording a message or is being operated by another internal participant (only for a system with a local answer machine)
	Ringtone switched off

Icon	Meaning
	"Beep" ringtone activated
	Keypad lock activated
	Battery charge status: White: between 11% and 100% charged
	Red: less than 11% charged
	Flashes red: battery almost empty (approx. 5 minutes of talktime left)
	Battery is charging (current charge status): 0% - 100%

Display key icons

Icon	Meaning
	Last number redial
	Delete text
	Open the directory

Icon	Meaning
	Copy number to the directory
	Divert a call to answer machine (only for a system with a local answer machine)

Display icons to indicate ...

Icon	Meaning
	External call
	Internal call
	Call of a blocked number (protection mode Silent Call)
	Establishing a call (outgoing call)
	Connection established
	No connection established/ connection terminated

Icon	Meaning
	Reminder for appointment
	Reminder for anniversary
	Alarm call
	Countdown timer
	Answer machine is recording (only for a system with a local answer machine)

Other display icons

Icon	Meaning
	Alarm clock is activated, display with alarm time
	Timer switched on, display with countdown
	Action complete (green)
	Action failed (red)

Icon	Meaning
	Information
	(Security) prompt
	Please wait ...
	Just Friends function enabled

Index

A	
Activating/deactivating message LED	22
Advisory tones	44
Alarm	32
Alarm clock	31
switch on/off	31
Alert tone (beep)	44
Anniversary, see Appointment	
Answer machine	19
calling back a caller	20
Answer, auto	44
Appointment	
display missed	30
missed	30
notification	29
setting	29
Assigning number key	45
Authorisation	52
Auto answer	44
B	
Baby monitor	32
activation	33
deactivation	33
Base directory	27
transferring contacts	27
Battery	
charging	9
charging status	56
inserting	8
Beep (alert tone)	44
Belt clip	8
Best base station	10
Black list	36
block caller	37
copying a number from a call list	37
dynamic	38
Searching for a number	37
Broken display	6
C	
Calendar	29
Call	
external	16
Call block	36
Call list	
copying a number to the directory	21
delete	21
delete an entry	21
dialling	17
entry	20
opening	20
Call lists	20
Call protection	35
Call, anonymous	
protection from	35
Caller	
blocking	17
Calling	
external	16
Cancel the alarm (baby monitor)	33
Care	53
Care of the device	53
Changing	
display language	39
earpiece volume	42
handsfree volume	42
Character charts	55
Charge status of the batteries	56
Charging cradle (handset)	
connecting	7
Charging time of handset	54
Colour scheme	41
Configuring system messages	47
Connecting the headset	11
Connection	
assigning handset	46
changing name	46
Contact with liquid	53
Contents of the package	7
Control key	4, 13
Correcting incorrect entries	15
Countdown (timer)	31
Country	39
Customer Care	50
D	
Data protection	52
Deactivating wireless module	34
Dialling	
from the call list	17
from the directory	16
from the redial list	16
using quick dial	45
Directory	23
copying numbers	25
dialling numbers	16
entry	23
memory	25
opening	23
order of entries	24
preferred	27
saving an entry	23
searching	24
selecting an entry	24
sending entry/list to handset	26
sending to handset	26

Directory key	14
change assignment	27
Display	18
activating/deactivating new message	22
backlight	42
broken	6
changing display language	39
colour scheme	41
directory memory	25
large font	41
missed appointment/anniversary	30
network mailbox message	21
Screensaver	40
Display icons	56
Display keys	4, 13
assigning	45
icons	56
Disposal	53
Dynamic black list	38
<hr/>	
E	
Earpiece profile	43
Earpiece volume	18
ECO DECT	34
Emergency numbers	
not possible	6
Encryption, DECT connection	49
End call key	4, 16
Entering numbers	15
Entering special characters	15
Entering text	15
Entering umlauts	15
Environment	52
Exclusion of liability	51
<hr/>	
F	
Firmware update	48
<hr/>	
G	
Getting started	7
<hr/>	
H	
Handset	
assigning connection	46
changing the settings	39
colour scheme	41
connecting the charging cradle	7
display backlight	42
display language	39
earpiece volume	42
handset volume	18
handsfree volume	18, 42
idle status	14
muting	18
overview	4
registering	10
resetting	49
set up	8
switch on/off	12
switching on/off	12
update	48
use as a baby monitor	32
Handsfree key	18
Handsfree mode	18
Handsfree profile	43
Handsfree volume	18
Hash key	4
Headset connector	4
Headset socket	11
Hearing aids	6
HX	2
<hr/>	
I	
Icons	
alarm clock	31
displaying new messages	21
indications	57
on display keys	56
status bar	56
timer	31
Idle display	
status messages	47
Idle status	
returning to	14
Indications, icons	57
Internal listening in	46
Internet connection	
outage	6
<hr/>	
K	
Key 1	4
Key, assigning	45
Keys	
control key	4, 13
display keys	4, 13
end call key	4, 16
handsfree	18
hash key	4
menu	13
message key	4
on/off key	4
recall key	4
star key	4
talk key	4

L	
LAN connection	
outage.....	6
Language	
display.....	39
Language, display.....	9
Large font.....	41
Line.....	46
Liquid	53
Lock/unlock the keypad.....	12
Lower/upper case.....	15
M	
Making calls	
external.....	16
Manufacturer's advice	52
Maximum Range.....	34
Medical equipment.....	6
Melody	
ringtone for internal/external calls.....	43
Memory in the directory.....	25
Menu key	13
Message key.....	4
Message lists	21
Microphone	
switch on/off.....	18
Missed anniversaries/appointments.....	30
Multiple calls	46
Mute the first ringtone	38
Muting the handset	18
N	
Number	
copying to the directory	25
saving in the directory.....	23
O	
On/Off button	4
Open Source Software	62
Operating time of handset.....	54
Outage	
Internet connection.....	6
LAN connection	6
Overview	
handset	4
P	
Power adapter	6, 55
Power consumption	51
Preferred directory	27
Protection from calls	
anonymous.....	35
black list.....	36
time control	35
Q	
Quick dial	16
R	
Radiation	
reducing.....	34
Radiation-free.....	34
Recall key	4
Redial list.....	16, 20
Registering (handset)	10
Ringtone	43
changing	43
melody for internal/external calls.....	43
muting	38
muting first	38
suppress first	38
time control	35
volume	43
S	
Safety precautions	6
Screensaver	40
Searching in directory	24
Sending	
entire directory to handset	26
Service	50
Setting the date	11, 39
Setting the time	11, 39
Setting up handset	8
Show line status	47
Show new messages	21
Showing the system status	47
Signal strength	56
Snooze mode (alarm)	32
Speaker	18
Star key	4
Status bar	4
icons	56
SUOTA	48
Switch on/off alarm (timer).....	31
Switching the ringtone on/off	43
Symbols, see Icons	56
T	
Talk key	4
Technical data	54
Technical details	51
Telephone	
operating	12
Time control for external calls	35
Timer	31
U	
Upper/lower case	15

V	
Viewing network mailbox message	21
VIP group, classify directory entry.....	24
VIP ringtone	24
Volume	
earpiece.....	42
handset handsfree volume	42
handset speaker/earpiece volume.....	18
speaker	42
W	
Warranty	51

All rights reserved. Rights of modification reserved.

Open Source Software

General

Your Gigaset device includes Open Source software that is subject to various license conditions. With regard to Open Source software, the granting of usage rights that go beyond the operation of the device in the form supplied by Gigaset Communications GmbH is governed by the relevant license conditions of the Open Source software. The corresponding licence conditions can be found below in their original version.

The respective license texts regularly contain limitations of liability with regard to the relevant licensor of Open Source Software. The exclusion of liability for the LGPL Version 2.1, for example, reads as follows:

„This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.“

The liability of Gigaset Communications GmbH remains unaffected by this.

Licence and copyright information

Your Gigaset unit includes Open Source software. The corresponding licence conditions can be found below in their original version.

Licence texts

Copyright (c) 2001, Dr Brian Gladman <>, Worcester, UK.
All rights reserved.

LICENSE TERMS

The free distribution and use of this software in both source and binary form is allowed (with or without changes) provided that:

1. distributions of this source code include the above copyright notice, this list of conditions and the following disclaimer;
2. distributions in binary form include the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other associated materials;
3. the copyright holder's name is not used to endorse products built using this software without specific written permission.

DISCLAIMER

This software is provided 'as is' with no explicit or implied warranties in respect of its properties, including, but not limited to, correctness and fitness for purpose.

Issue Date: 29/07/2002

Issued by

Gigaset Communications GmbH
Frankenstraße 2, D-46395 Bocholt

© Gigaset Communications GmbH 2023

Subject to availability.

All rights reserved. Rights of modification reserved.

www.gigaset.com